



Popcorn Maker

Model No: JEA72




Please read this instruction manual carefully before use and save for later reference.

UNPACK YOUR POPCORN MAKER CAREFULLY AND REMOVE PACKING PIECES, LABELS AND STICKERS BEFORE USE.

Identifying The Parts of Your Judge Popcorn Maker

(with *Part Numbers* for customer replaceable items)

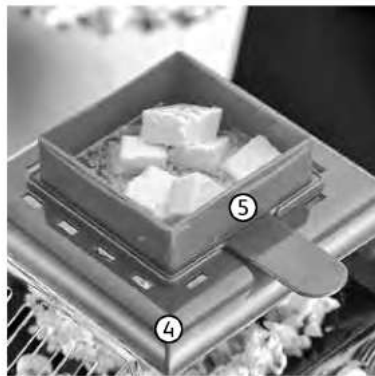

- ① Main Housing
- ② Popping Chamber
- ③ Clear Popping Chamber Cover (JEA72C)
- ④ Lid (JEA72L)
- ⑤ Measuring Cup/ Butter Warmer (JEA72M)
- ⑥ On/Off Switch
- ⑦ Power Cord and Mains Plug



Before first use / Cleaning

- Wash the Clear Popping Chamber Cover ③, Lid ④ and Measuring Cup/ Butter Warmer ⑤ in warm soapy water and dry thoroughly.
- Clean the outer surface of the Main Housing ① ensure the Popcorn Maker is unplugged, wipe with a soft damp cloth and dry thoroughly. Do not use abrasive creams, steel wool or scouring pads.
- Clean the Popping Chamber ② wipe with a soft dry cloth. Do not allow any water to enter the popping chamber as this will damage the machine.
- Reassemble by placing the Clear Popping Chamber Cover ③, Lid ④ and Measuring Cup/Butter Warmer ⑤ on top of the Main Housing ①.

Use

1. Fill the Measuring Cup/Butter Warmer ⑤ with corn (100g MAX capacity).
2. Pour the corn into the Popping Chamber ② within the Main Housing ①.

TIP: Fresh (dried) corn kernels give best results. Once the pack of corn kernels is opened, it should be stored in an airtight container in the fridge.

3. Replace the Measuring Cup/Butter Warmer ⑤ with the Measuring Cup/Butter Warmer facing downwards into the Lid ④.

For optional melted butter -

- Add a knob of butter or margarine to the Measuring Cup/Butter Warmer ⑤ and place on top of the Lid ④ with the Measuring Cup/ Butter Warmer facing upwards. The butter will warm and start to melt while the popcorn cooks. Do not allow any butter or margarine to enter the Popping Chamber ② as it will damage the machine.
4. Place a large enough bowl under the shoot of the Clear Popping Chamber Cover ③.
 5. Plug the Mains Plug ⑦ into a suitable power supply.
 6. Flick the On/Off Switch ⑥ from “0” to “I” to turn the Popcorn Maker on.
 7. The corn should start to pop within a minute. Rotate the bowl as it fills with popcorn to avoid spillage.
 8. When the corn has stopped popping return the On/Off Switch ⑥ to position “0” and unplug the Mains Plug ⑦.

After use/before further use

- Allow the Popcorn Maker to cool for at least 10 minutes before further use or cleaning.
- Remove any unpopped corn from the popping chamber.

Cautions

- Carefully read these instructions before using your appliance.
- The appliance is intended for household use only and not for commercial or industrial use.
- Use the appliance only for its intended purpose.
- Children shall not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Check that the electrical supply ratings of the appliance are correct for your home (see Specification).
- Do not operate this appliance using a timer/controller, or remote control system.
- Do not insert plug with wet hands.
- Ensure that the Power Cable does not trail over the edge of the work top, is positioned where it cannot be accidentally pulled or snagged, and that it is kept away from any hot object.
- The appliance should always be used on a flat and stable heat resistant surface.
- Do not place the appliance near a hot gas or electric burner, or in a heated oven.
- Do not place the appliance underneath or near flammable materials, such as curtains or drapes or any other combustible material.
- Do not use the appliance on a carpet or tablecloth.
- Never move the appliance by pulling the power cable.
- Do not move the appliance whilst in operation.
- Do not use the appliance for any purpose other than that for which it is intended.
- Do not use the appliance outdoors.
- Do not remove the Measuring Cup/Butter Warmer ⑤ while popping is in progress.
- Do not use oil/butter/margarine in the popping chamber.
- The appliance should never be left unattended when plugged in.
- Unplug from the mains outlet when appliance is not in use, in storage, before attaching or removing accessories, and before cleaning.
- Always ensure that the popcorn maker has completely cooled down before cleaning and storage.
- Never immerse the Main Housing ① in water or other liquids or use near basins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
- Never use the appliance when it has been dropped, shows damage (including to the power cable) or does not function properly; contact Judge at the address given. Do not attempt to repair the appliance yourself.
- If the mains supply cable becomes damaged, contact Judge at the address given beneath the warranty statement.
- Do not attempt to repair the appliance. In case of breakdown return it to Judge at the address given beneath the Guarantee statement.

Specification

Name	Model No.	Rated Wattage	Rated Frequency	Rated Power
Popcorn Maker	JEA72	1200W	50/60Hz	230V



Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE

CUSTOMER SERVICES

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.judgecookware.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000



FOR DOMESTIC USE ONLY

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

JUDGE Popcorn Maker

