

global gizmos®

CLASSIC POPCORN MAKER

Please read these instructions before first use and retain for future reference.

Caution:

1. Read all instructions carefully and retain for future reference.
2. Always switch the power off at the socket & unplug the appliance when not in use.
3. Never touch the surface when in use or immediately after use.
4. To protect against electric shock never immerse this product in water.
5. Young children should be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by persons (including children), with reduced physical and mental capabilities, or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Always switch off appliance & the socket & allow to cool before cleaning.
8. Do not operate any appliance with a damaged cord or plug if the appliance has been damaged or malfunctions in any way. Return the appliance to nearest authorised service facility for examination & consults a qualified electrician.
9. Only use specified accessories, (By manufacturer) with this appliance.
10. Never use outdoors.
11. Do not operate in damp or very humid conditions.
12. Never touch glass during operation as it will become extremely hot.
13. Position the cord so that it cannot become a hazard.
14. Ensure that the cord does not touch the hot surface.
15. Never move this appliance when it is hot.
16. Do not use this appliance for other than it's intended use.
17. Ensure the socket you plug your Popcorn Maker into corresponds with the voltage specified on the rating plate found on the base of this appliance.

How to Clean:

- Place on a level surface at all times.
- Wipe clean with a damp cloth ONLY.
- Do not submerge product in water.
- Do not clean with abrasive solutions or materials.

Warning: Adult supervision required at all times when children are around this appliance.

Specifications

Voltage: 220-240V 50Hz

Power Output: 1200W

How to Use

- Place the Popcorn maker on a flat and even surface and ensure that the cord will not become a trip hazard.
- Before first use, it is recommended to wipe the Popcorn maker and accessories with a damp cloth.
- Press the switch on the side of the unit to the ON position.
- Measure popcorn using measuring cup provided. One full measure per session is enough. More than one full measure could overflow the Popcorn Maker and disturb the proper functioning of the Popcorn Maker.
- Pour the Popcorn into the aluminium heat Chamber through the CORN-IN-LET.
- Have a container ready to catch your popcorn.
- Switch off at the socket and unplug the appliance when finished.



PLUG:

1. This appliance has been fitted with a BS UK compliant plug which should not be replaced or removed
2. The plug is fitted with a 13 amp fuse link which is suitable for this type of appliance and should only be replaced by a fuse link of the same rating
3. If access to the fuse link is only possible by removing the plug cover this must only be done by a suitably qualified person.
4. If the plug or the mains cable of this appliance is damaged do not use and dispose of the appliance responsibly.
5. This appliance is earthed.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment

This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

Item Numbers: 50900

Global Gizmos® is Registered, manufactured
for and distributed by BENROSS L24 9WD
©2019 MADE IN CHINA

