 


Erbauer®

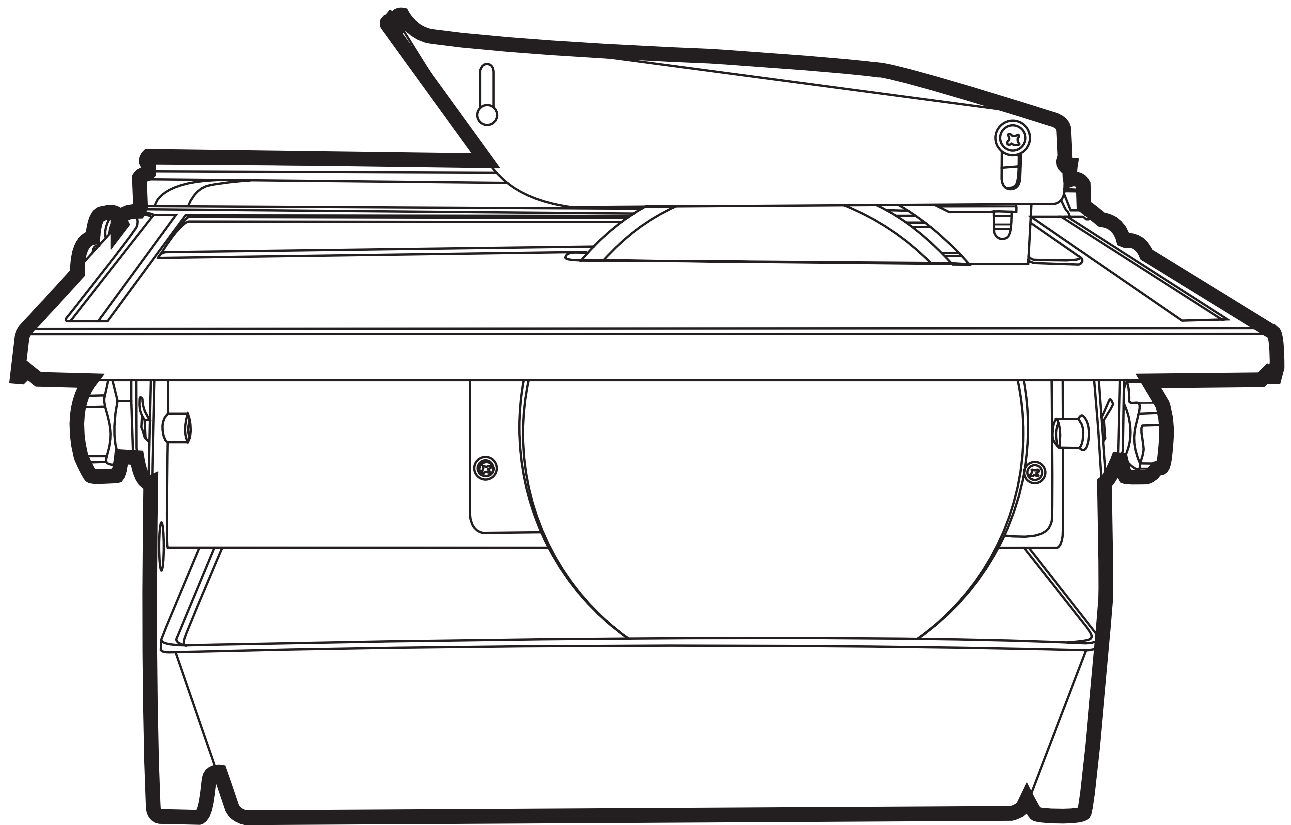

ERB180C

2 WARRANTY
YEARS

720W Tile Cutter

Erbauer®

Congratulations on your purchase of a quality power tool from Screwfix Direct Ltd. This product should give you reliable service but for your peace of mind this Erbauer power tool does carry a 24-month guarantee, the terms of which are detailed below.

If this product develops a fault within the guarantee period contact Screwfix Direct Ltd on Freephone 0500 41 41 41.

Please retain this handbook in case you need to refer to safety, care or guarantee information in the future.

GUARANTEE

This Erbauer product carries a Screwfix Direct Ltd guarantee of 24 months. If your product develops a fault within this period, you should, in the first instance contact Screwfix Direct Ltd on Freephone 0500 41 41 41. If the fault occurs within the first 24 months, you may return the goods for a full refund or we will repair or replace the goods if you prefer. When repair is not practical or identical goods are not available, alternative goods of similar specification and quality will usually be provided but, failing this, you will be offered a partial or full refund depending on the time period since purchase.

This guarantee specifically excludes losses caused due to:

- Fair wear and tear
- Misuse or abuse
- Lack of routine maintenance
- Failure of consumable items (such as batteries)
- Accidental damage
- Cosmetic damage
- Failure to follow manufacturer's guidelines
- Loss of use of the goods
- Repairs attempted by anyone, unless authorised by Screwfix Direct Ltd.

This guarantee does not affect your statutory rights. This guarantee is only valid in the UK.

For further technical advice and spare parts, please contact the customer helpline number on 0845 607 6380.

SAFETY INSTRUCTIONS



WARNING! Read all instructions. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

SAVE THESE INSTRUCTIONS

1. Keep the work area clean.

Cluttered areas and benches invite injuries.

2. Consider work area environment.

Do not expose power tools to rain. Do not use power tools in damp or wet locations. Keep the work area well lit. Do not use power tools where there is risk to cause fire or explosion.

3. Guard against electric shock.

Avoid body contact with earthed or grounded surfaces (e.g. Pipes, radiators, ranges, refrigerators, other metal surfaces).

4. Keep children away.

Do not let visitors touch the tool or extension cord. All visitors should be away from area.

5. Store idle tools.

When not in use, tools should be stored in a dry, high or locked up place, out of reach of children.

6. Do not force the tool.

It will do the job better and safer at the rate for which it was intended.

7. Use the right tool.

Do not force small tools or attachments to do the job of a heavy-duty tool. Do not use tools for purposes not intended, for example, do not use circular saws to cut tree limbs or logs.

8. Dress properly.

Do not wear loose clothing or jewellery, they can be caught in moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Wear protecting hair covering to contain long hair.

9. Use safety glasses.

Also use face or dust mask if the cutting operation is dusty.

10. Connect dust extraction equipment.

If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.

11. Do not abuse the cord.

Never carry the tool by the cord or yank it to disconnect it from the socket. Keep the cord away from heat, oil and sharp edges.

12. Secure work.

Use clamp or a vice to hold the work. It is safer than using your hand and frees both hands to operate the tool.

13. Do not overreach.

Keep proper footing and balance at all times.

14. Maintain tool with care.

Keep cutting tools sharp and clean for better and safer performance. Follow

720W Tile Cutter

instructions for lubrication and changing accessories. Inspect tool cord periodically and if damaged have it replaced by an authorised service facility. Inspect extension cords periodically and replace if damaged. Keep handles dry, clean and free of oil or grease.

15. Disconnect tools.

When not in use, before servicing and when changing accessories such as blades, bits and cutters, remove the mains plug from the socket.

16. Remove adjusting keys and wrenches.

Make the habit of checking to see that keys and adjusting wrenches are removed from the tool before turning it on.

17. Avoid unintentional starting.

Do not carry a plugged-in tool with a finger on the switch. Ensure switch is in the off position when plugging in.

18. Use outdoor extension leads.

When tool is used outdoors, use only extension leads approved for outdoor use.

19. Stay alert.

Watch what you are doing. Use common sense. Do not operate tool when you are tired or under the influence of drugs or alcohol.

20. Check damaged parts.

Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, free running of moving parts, breakage of parts, mounting and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorised service centre unless otherwise indicated in this instruction manual. Have defective switches replaced by an authorised service facility. Do not use the tool if the switch does not turn it on and off.

21. Warning.



The use of any accessory or attachment, other than those recommended in this instruction manual may present a risk of personal injury.

22. Have your tools repaired by qualified person.

This electrical tool is in accordance with the relevant safety requirements. Repairs should only be carried out by qualified persons using original spare parts, otherwise this may result in considerable danger to the user.

HEALTH ADVICE



WARNING! When drilling, sanding, sawing or grinding, dust particles will be produced. In some instances, depending on the materials you are working with, this dust can be particularly harmful to you (e.g. lead from old gloss paint).

You are advised to consider the risks associated with the materials you are working with and to reduce the risk of exposure. You should:

- Work in a well-ventilated area.
- Work with approved safety equipment, such as those dust masks that are specially designed to filter microscopic particles.

Additional Safety Rules for your Tile Cutter



1.Remove the mains plug from socket before carrying out any adjustment servicing.



2.If the supply cord is damaged have it replaced by a qualified person.

3.Always wear both eye and ear protection when using the machine.

Ensure that the directional arrow marked on the blade corresponds with the rotational direction of the motor.

4.With the machine disconnected from the power supply, rotate the blade by hand to ensure it is free from obstruction.

5.Always keep the blade securing arbor and collars clean.

6.Ensure that the blade-securing bolt is securely tightened with a suitable wrench.

7.Never try to cut freehand. Always ensure that the tile to be cut is pressed firmly against the parallel side fence.

8.Ensure that the work piece to be cut off has sufficient room to move sideways. Failure to do so may result in the off cut binding against the blade.

9.Never cut more than one tile at a time.

10.Never cut pieces too small to be held securely against the side fence without leaving enough space for the hand to be a safe distance from the blade.

11.Ensure that the table and surrounding area are clear with the exception of the tile to be cut.

12.Never fit substandard blades to the machine. Only fit correctly sized diamond blades.

13.Before cutting a tile piece let the saw blade run freely for a few seconds. If it makes an unfamiliar sound or vibrate excessively switch it off immediately and disconnect from the power supply. Investigate the cause or consult a qualified person for advice.

14.Let the blade reach full speed before commencing the cut.

15.Do not force the blade to cut the tile.

16.Let the blade come to a complete stop before removing any jammed or off cut material from around the blade area.

17. Always use the appropriate safety equipment that is required for the product. e.g. Goggles / Safety Spectacles, Ear defenders (essential with tools with a noise rating of over 85 dbA), Gloves and face masks. In all cases ensure that the safety equipment is in good condition.

SYMBOLS



Read the manual



Warning

 


Wear gloves



Wear dust mask, eye & ear protection

720W Tile Cutter

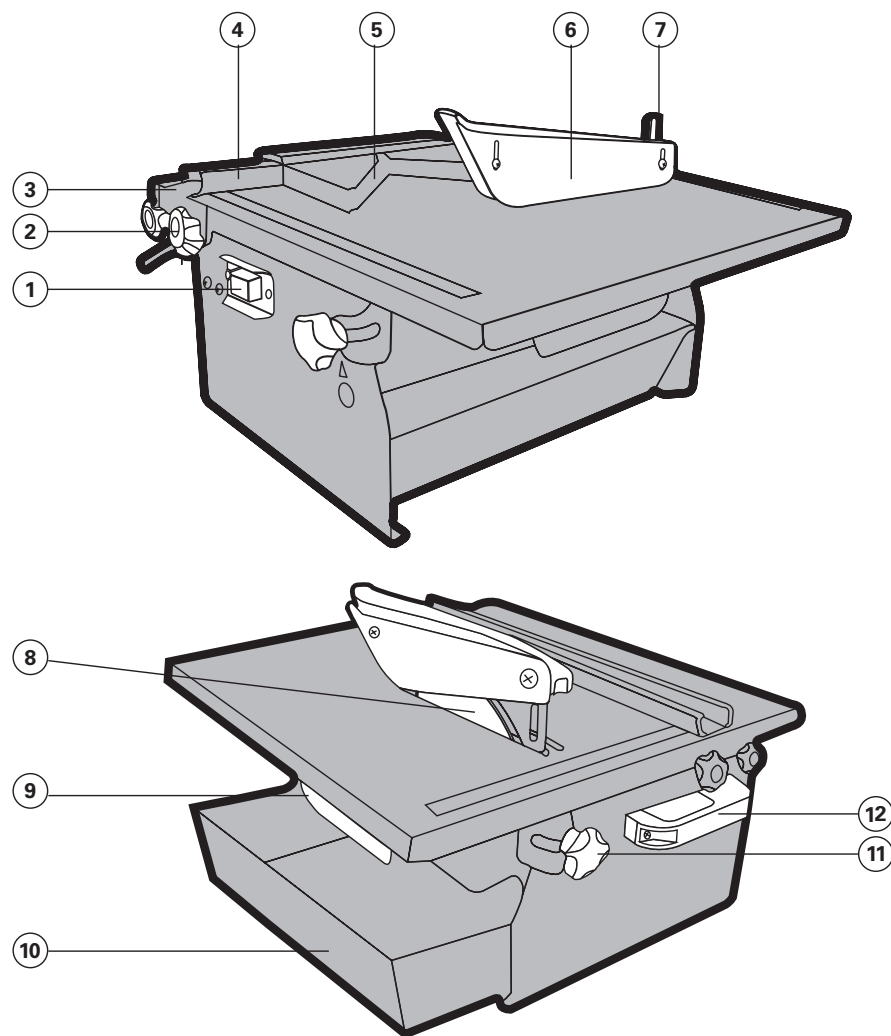

1. ON/OFF SWITCH

2. PARALLEL GUIDE SECURING KNOB

3. GUIDE CLAMPS (SEPARATE ACCESSORY)

4. PARALLEL GUIDE

5. 45 DEGREE MITRE GUIDE

6. BLADE GUARD

7. BLADE GUARD BRACKET

8. DIAMOND CUTTING BLADE

9. BLADE GUARD COVER

10. WATER TRAY

11. TABLE ANGLE SECURING KNOB (ONE EACH SIDE)

12. TRANSIT HANDLE

TECHNICAL DATA

| | |
|------------------------|----------------------------|
| Voltage: | 230V~50Hz |
| Input power: | 720W(S2 15min) |
| No load speed: | 2800min ⁻¹ (S2) |
| Diamond blade size: | Ø180x2.2x Ø25.4mm(bore) |
| Max. cut at 90 degree: | 35mm |
| Table tilting range: | 0-45 degrees |
| Table size: | 420 x 400mm |
| Weight: | 14.2kg |

NOTE: S2 means:After 15mm continous cutting,The motor must be switched off and allowed to cool to room temperature.

NOISE AND VIBRATION DATA

| | |
|-----------------------|-----------------------|
| Sound pressure level: | 56.6dB (A) |
| Sound power level: | 69.6dB (A) |
| Vibration level: | 0.604m/s ² |

ACCESSORIES

Parallel guide(includes 2clamps)
45 degree mitre guide
spanner

1pc
1pc
2pcs

720W Tile Cutter

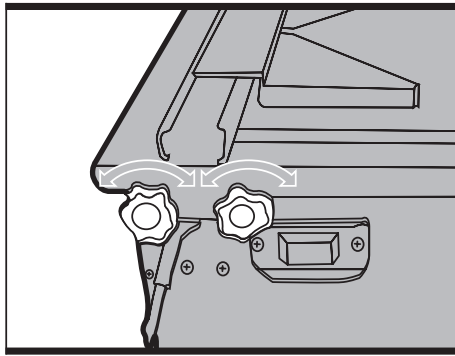 


Fig 1

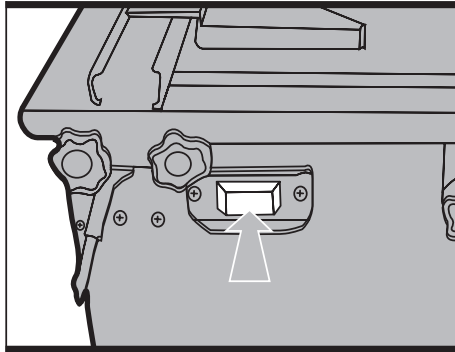 


Fig 2

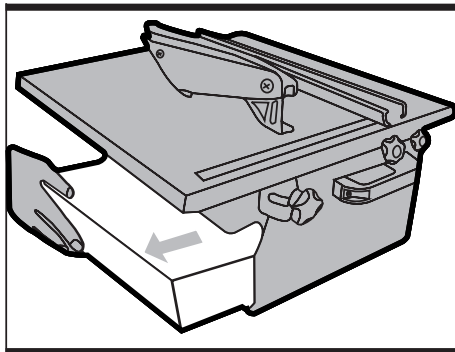 


Fig 3

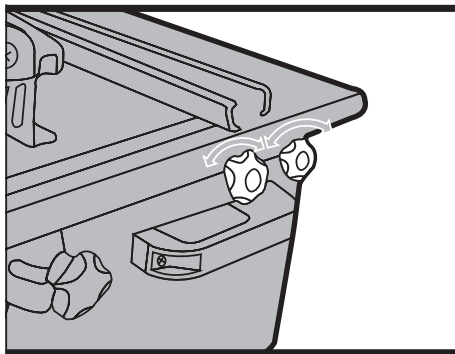 


Fig 4

OPERATION INSTRUCTIONS

⚠ WARNING: Before using your tile gutter be sure to read the instruction manual carefully.

1. FITTING THE PARALLEL GUIDE (see fig1)

Position the parallel guide on work table as shown. Align the holes in the fixing plates with the holes in the upright ends of the parallel guide, fix it with the four securing knobs provided. See fig1.

Note: The fixing plate should be fitted on the inside surface of the work table edges.

Note: Before use, the blade guard bracket and blade guard must be fitted to the cutter.

2. OPERATING-STARTING AND STOPPING

(see fig2)

To start the cutter, plug mains lead into mains supply. Press rocker switch to right to start (marked "I" on switch). Press rocker switch to left to stop (marked "O" on switch, see fig2).

3. FILLING THE WATER TRAY WITH WATER

(see fig3)

Before the cutter can be used the water tray must be filled. When removing machine from packaging, the water tray is stored inside the main housing. Remove it (see fig3). Fill the tray to 3/4 full with water. Do not add chemicals or detergents to the water.

4. MAKING A STRAIGHT CUT (see fig4,5)

Adjust the guide to the desired width from the blade using the scale rules on the table surface for reference. To loosen and adjust, use the four securing knobs (see fig4).

Position the tile firmly against the side fence and pass through the blade in a smooth action. Do not force the tile to be cut too quickly (see fig5).

5. MAKING A MITRE CUT (see fig6)

Follow the same procedure for a straight cut but employ the mitre guide in conjunction with the parallel guide (see fig6). The mitre guide simply runs up against the edge of the parallel guide. Ensure that the tile is held firmly into the guide before making the cut.

6. CUTTING WITH THE TABLE AT AN ANGLE

(see fig7)

Use this facility if you wish to cut an angle.

Loosen the two table securing knobs (one at each side of table).

Tilt the table to the desired angle using the scale under the table (see fig7). Re secure the table and make the cut as before.

7. ADJUSTING THE BLADE GUARD BRACKET

AND BLADE GUARD (see fig8)

Note: The blade guard bracket should be in alignment with the plane of the blade, if not, the blade guard bracket must be adjusted:

First, Take off the blade guard, then loosen the two screws on the bracket, adjust the blade guard bracket to align with the plane of the blade, then screw down the two screws. Then refit the blade guard, See fig8.

MAINTENANCE

CHANGING THE BLADE

1. Take away the water tray.

2. Remove the blade guard cover by loosening the two screws. See fig9.

3. Loosen and remove the blade fixing nut. You will need two spanners, A (8mm) and B (19mm) -Not Supplied. See fig10.

4. Remove the outer flange and the blade, clean any dust and debris from the arbor and blade securing flange.

5. Mount the blade on the arbor and place the outer flange. Turn the blade 360 degrees to make sure it matches with the flange properly. Fully tighten the securing nut.

Note: Fit the inner and outer flange in proper order. They have the different centre holes. See fig11.

Ensure that the arbor and flange are clean.

Match blade direction arrow to blade rotation direction (wording on wheel facing you).

6. Fit the blade guard spacing plate behind the blade and the blade guard cover over the blade. Fix these two parts using the washers and screws provided. See fig12.

Note: After changing the blade, ensure the table guard bracket and the table are on the same vertical plane.

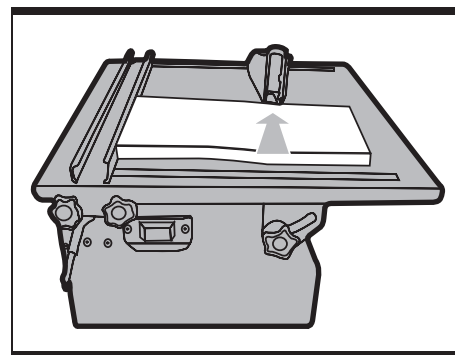 


Fig 5

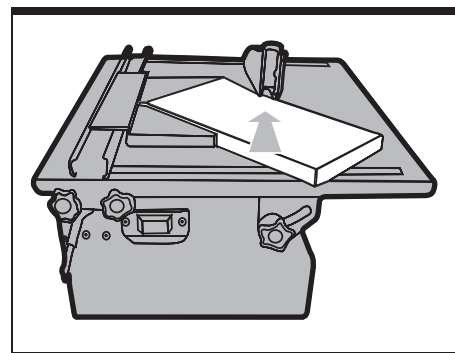 


Fig 6

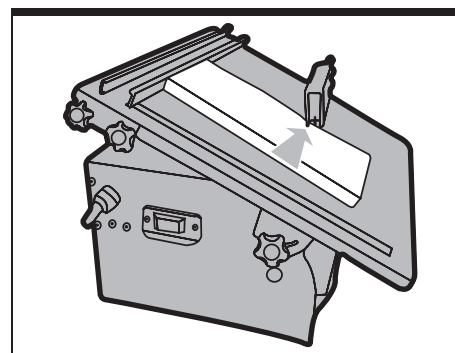 


Fig 7

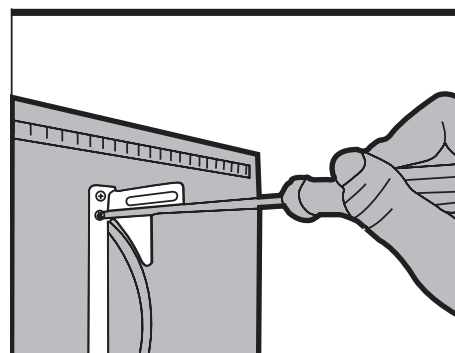 


Fig 8

720W Tile Cutter

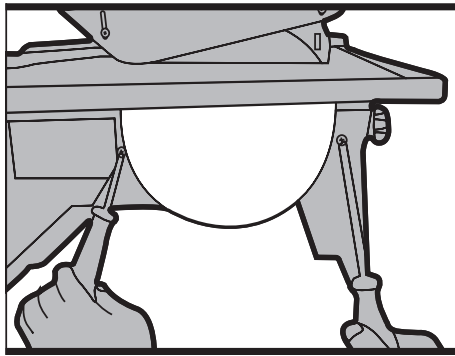 


Fig 9

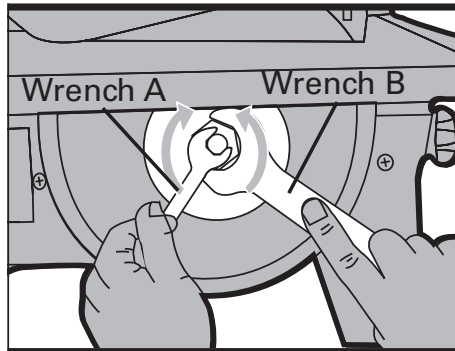 


Fig 10

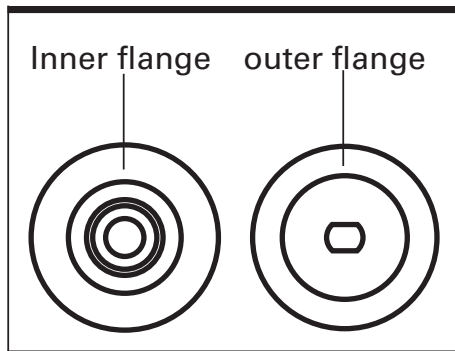 


Fig 11

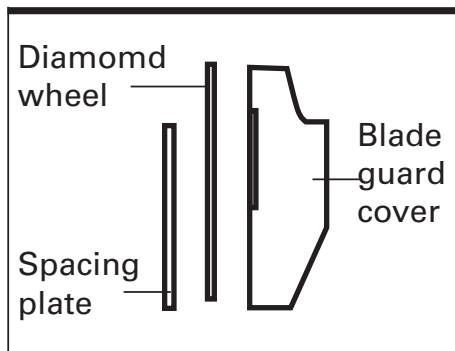 


Fig 12

ENVIRONMENTAL PROTECTION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

PLUG REPLACEMENT

The fuse in the main plug of your power tool should always be replaced with one of identical rating.

Check the voltage given on your power tool matches the supply voltage.

The power tool is supplied with a fitted plug, however if you should need to fit a new plug follows the instruction below.

IMPORTANT

The wires in the mains lead are coloured in accordance with the following code:

Green & yellow - Earth

 
Blue - Neutral

Brown - Live

The wire which is coloured **green & yellow** must be connected to the terminal which is marked with **E** or \perp .

The wire which is coloured blue must be connected to the terminal which is marked with **N**. The wire, which is coloured brown, must be connected to the terminal, which is marked with the letter **L**.

A 13AMP (BS1363 or BS1363/A) plug must be used and a 13 AMP fuse must be fitted.

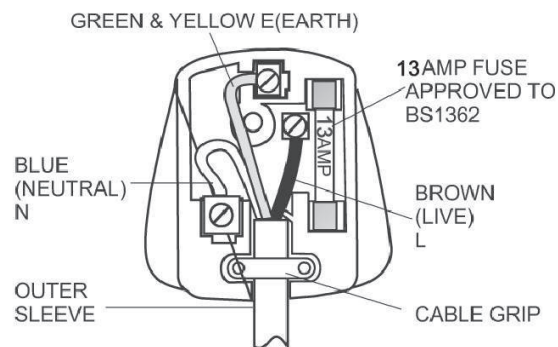



Declaration of Conformity

We, Importer

Screwfix Direct Ltd

Mead Avenue

Houndstone Business Park

Yeovil

BA 22 8RT

Declare that the product

720W TILE CUTTER

ERB180C

Complies with the essential health and safety requirements of the following directives:

89/336 EEC, 93/68 EEC – EMC Directive.

73/23 EEC, 93/68 EEC – Low Voltage Directive.

98/37 EC – Machinery Directive.

Standards and technical specifications referred to:

EN 61029-1:2000

EN55014-1/A2:2002

EN55014-2/A1:2001

EN 61000-3-2:2000

EN 61000-3-3:1995/+A1:2001

Authorised Signatory

Date: 03/15/05

Signature: _____

Name: Peter Harries
Screwfix Direct Ltd
Quality Manager



2005

720W Tile Cutter

Erbauer®