

LAKELAND

INSTRUCTION BOOKLET POPCORN MAKER



Model: 62812

LAKELAND POPCORN MAKER

Thank you for choosing the Lakeland Popcorn Maker.

Please take a little time to read this booklet before getting started and keep it in a safe place for future reference.

The Popcorn Maker creates delicious home-made sweet and savoury popcorn without any mess. You can pop 60g of kernels in less than 3 minutes and eat straight from the bowl, watching your favourite film!

Here at Lakeland, our award-winning family-owned business still offers the same excellent quality, value for money and exceptional customer service as when we founded the company back in the 1960s.

Our products are hand-picked and thoroughly tested so you can be sure that everything you purchase will be a pleasure to use for many years to come.

CONTENTS

Product features	3
Safety cautions	4-5
Using your Popcorn Maker and using for the first time	6
Instructions for use	7
Hints and tips	8
Frequently asked questions	9
Care and cleaning.....	10
Technical information.....	11
Electrical connections	11
Recycling your electricals	11

PRODUCT FEATURES


1. Lid
2. Popping chute
3. Transparent bowl
4. Popping chamber
5. Base unit
6. Cord and plug
7. Power switch
8. Non-slip feet
9. Measuring cup



SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference. Always follow these safety cautions when using the appliance to avoid personal injury or damage to the appliance. This appliance should be used only as described in this instruction book.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- Make sure your electricity supply matches the voltage shown on the appliance.
- Ensure all packaging materials and any promotional labels or stickers are removed from the appliance before the first use.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or has been dropped. In the event of damage, or if the appliance develops a fault contact the Lakeland customer care team on 015394 88100.
- Do not use this appliance if the lead is damaged. Contact the Lakeland customer care team on 015394 88100.
- Always use the appliance on a dry, level, heat resistant surface.
- Unplug from the mains when not in use and before cleaning. To disconnect, turn the socket to "off" and remove the plug from the mains socket.
- Do not use any accessories or attachments with this appliance other than those recommended by Lakeland.
- To protect against fire, electric shock or personal injury, do not immerse cord, plug or base in water or other liquids.
- Do not leave the lead hanging over the edge of a kitchen table or worktop. Avoid contact between the lead and hot surfaces.
- For indoor use only.
- For domestic use only.
- This appliance should be used for preparation of food as described within the instructions for use that accompany it.
- Always ensure that your hands are dry before removing the plug from the mains socket. Never pull the plug out of the mains socket by its lead.
- To avoid injury or possible fire, do not cover the appliance when in use.

- Do not connect this appliance to an external timer or remote control system.
- An extension cable may be used with care. The electrical rating of the cable should be at least as great as the appliance. Do not allow the cable to hang over the edge of the worktop or touch any hot surfaces.
- This appliance complies with the basic requirements of Directives 2014/30/EU (Electromagnetic Compatibility) and 2014/35/EU (Low Voltage Directive).
- **WARNING:** A cut off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure the cut off plug is disposed of safely.
-  **CAUTION:** The plastic bags used to wrap this appliance or the packaging may be dangerous. To avoid risk of suffocation, keep these bags out of reach of babies and children. These bags are not toys.
- **DO NOT** operate the Popcorn Maker empty.
- **DO NOT** use oil in the popping chamber.
- **DO NOT** put more than 80g of popcorn kernels into the popping chamber and do not let the appliance work continuously for more than 3 minutes.
- **NEVER** remove the lid when the appliance is in operation.
- **PLEASE NOTE:** Unpopped kernels may remain, please be careful when eating. This can be a choking hazard.

USING YOUR POPCORN MAKER FOR THE FIRST TIME


- Unpack the Popcorn Maker, remove all the packaging materials.
- Before first use, wipe the base with a clean damp cloth.
- **DO NOT** allow any water into the popping chamber, as this will damage the appliance.
- Wash the lid and bowl in warm soapy water, rinse and dry thoroughly.
- Make sure that all parts are clean and dry before assembling the product.

WARNING: Do not insert the plug into a socket or turn on the Popcorn Maker before you have fully assembled it.



1. Place the base unit on a level, sturdy and dry surface near a socket, with the power switch on the right. The appliance should be stable on its non-slip feet.

2. Place the bowl on top of the base unit lining up the indent with the groove.

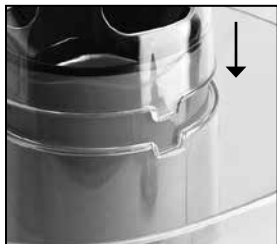

3. Put the lid on top of the popping chamber, lining up the indent with the groove.

4. The Popcorn Maker is now ready to use.

INSTRUCTIONS FOR USE

- Firstly, check that the power switch is switched off, the 'O' position before you plug in the appliance.
- Remove the lid.
- Fill the measuring cup with fresh popcorn kernels, this will give the best results. **DO NOT** exceed 80g, this is the MAX capacity of the measuring cup filled level to the top.
- Pour the kernels into the popping chamber.
- Put the lid on top of the popping chamber, lining up the indent with the groove.
- Plug in and switch on at the socket.
- Switch on the power switch to the 'I' position and the Popcorn Maker will start popping.
- You can check the progress through the lid. The appliance will take about 3 minutes to pop the kernels. **DO NOT** allow the appliance to run for more than 3 minutes.

NEVER lift the lid whilst the appliance is in operation.

- When the popcorn kernels have stopped popping, switch off the power switch to the 'O' position and switch off and unplug the appliance at the socket.
- Un-popped kernels may remain in the popping chamber. It is unlikely these will be able to pop, so please discard.
- Carefully remove the lid.
- Lift off the transparent bowl and either eat from the bowl or transfer to your favourite dish and season if desired.
- **DO NOT** let the appliance work continuously for more than 3 minutes. Allow the motor to cool down for 10 minutes before using again.
- **Note:** Before starting another portion of popcorn, remove any un-popped kernels from the popping chamber.
- **PLEASE NOTE:** Un-popped kernels may remain, please be careful when eating. This can be a choking hazard.

HINTS AND TIPS

- Fresh popcorn kernels give best results. Once the pack of popcorn kernels is opened, it should be stored in an airtight container in the fridge.

FREQUENTLY ASKED QUESTIONS

Question: The Popcorn Maker is fully assembled, why is nothing happening when I press the power on/off switch.

Answer: Check that appliance is plugged in and switched on at the socket.

Question: Why have not all my popcorn kernels popped?

Answer: Some popcorn kernels may not pop because the inside of the kernel is too dry. The kernel pop is caused by moisture inside the kernel heating up and creating steam. The pressure causes the shell to explode, therefore resulting in popcorn. When there's not enough moisture, the kernel won't pop.

CARE AND CLEANING

- Unplug the Popcorn Maker before cleaning.
- Clean thoroughly before using for the first time and after every use.
- Check the parts for wear or damage after every few uses.
- **DO NOT** use abrasive cleaners, or steel wool.
- **NEVER** immerse the base in water or any other liquid.
- **DO NOT** allow any water into the popping chamber, as this will damage the appliance.
- To clean the base unit, wipe with a clean damp cloth and dry thoroughly before storing.
- Wash the lid and bowl in warm soapy water, rinse and dry thoroughly before storing.
- Store the Popcorn Maker with the power cable loosely coiled. Never wrap it tightly around the product.

TECHNICAL INFORMATION

- Power: 1200W.
- Voltage: 220V.
- Frequency: ~50/60Hz.
- Flex length approx. 75cm. (29½").

ELECTRICAL CONNECTIONS

THIS APPLIANCE MUST BE EARTHED

The appliance is fitted with a fused three-pin plug to BS1363 which is suitable for use in all homes fitted with sockets to current specifications.

CHANGING THE 10 AMP FUSE

Use a 10 amp BS1362 fuse. Only BSI or ASTA approved fuses should be used. If you are unsure which plug or fuse to use, always refer to a qualified electrician.

Note: After replacing or changing a fuse on a moulded plug which has a fuse cover, the cover must be refitted to the plug; the appliance must not be used without a fuse cover. If lost, replacement fuse covers can be obtained from an electrical shop. This appliance complies with the following EU Directives: 2014/35/EU (Low Voltage Directive) and 2014/30/EU (EMC Directive).



RECYCLING YOUR ELECTRICALS

The Waste Electrical and Electronic Equipment (WEEE) Directive requires UK distributors to maximise separate collection and environmentally friendly processing of WEEE.

UK distributors (including retailers) are required to provide a system which allows all customers buying new electrical equipment the opportunity to recycle their old items free of charge.

As a responsible retailer, we have met these requirements by offering all customers buying new electrical and electronic equipment free take-back of their old electricals on a like-for-like basis.



Lakeland

Alexandra Buildings, Windermere, Cumbria, UK LA23 1BQ
Tel: +44(0)15394 88100 lakeland.co.uk