

ASDA

Electric Slow Cooker

Model: ESC-30



INSTRUCTIONS MANUAL

Please read this book thoroughly and retain instructions for future reference

IMPORTANT SAFEGUARDES


When using your electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric hazard and injury to persons, including the following.

1. Read all instructions
2. Do not touch hot surfaces. Use handles or the knob.
3. For safety sake, always use a reliably earthed power supply to operate this appliance.
4. Do not add too much water beyond the edge of the porcelain inner pot, or the water will flow out during cooking.
5. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they had been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when do not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate this appliance if the power cord or plug are damaged or if the appliance malfunctions, is dropped or has been damaged in any manner. Return it to the Authorized Service Station for examination, repair, electrical or mechanical adjustment.
8. The use of accessories/attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury.
9. This appliance is intended to be used in household and similar application such as:
 - staff kitchen areas in shop, offices and other working environment;
 - by clients in hotel, motels and other residential type environment.
10. Do not use outdoors. And cannot be used in application such as: - farm house; - bed and breakfast type environment.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, turn the control to "off", then remove plug from wall outlet.
13. Do not let cord hang over edge of table and counter, or touch hot surface.
14. Prior to first use, please make sure that the voltage rating of This Slow Cooker is the same as your household supply.
15. DO NOT place the slow cooker on or near a hot gas or electric burner, or in a heated oven.
16. DO NOT put frozen articles inside the porcelain cooker when it is hot, and do not wash the porcelain pot with cold water when hot.
17. DO NOT remove the lid when in cooking (unless required), otherwise the heat will run out and more cooking time will be needed.
18. To reduce the risk of electric shock, cook only in removable container. DO NOT cook food directly in the Aluminium pot.
19. DO NOT place the porcelain inner pot direct on to a fire or for other than its intended use.
20. To protect against electrical hazards. DO NOT immerse this appliance or its cord set in water or other liquids. Use only detergent or soapy damp cloth to clean.
21. To avoid any cracks to the slow cooker, proper maintenance is necessary.
22. The appliance is only used for household, not for commercial use.

SAVE THESE INSTRUCTIONS.

| Model | Power supply voltage | Max. Wattage | Max. Capacity |
|--------|----------------------|--------------|---------------|
| ESC-30 | 220-240V | 152-180W | 3L |

-

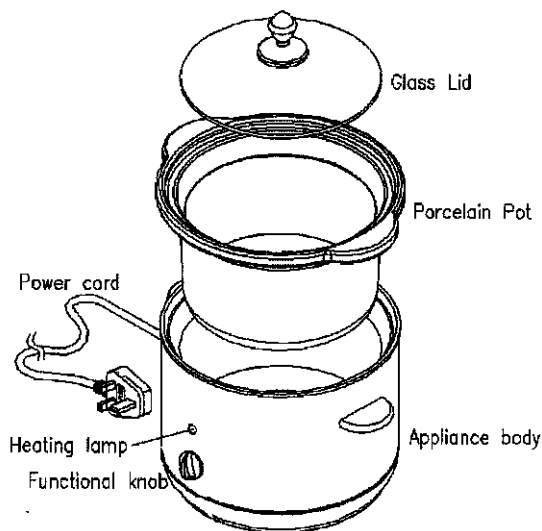

Encircled even heating:

Special heating diversion is especially good for long cooking. Heating energy coming from the bottom of the pot is equally distributed within the porcelain pot. This is especially good for meat stewing since it allows the nutritious material to seep thoroughly into the soup, even after longer cooking, great taste will stay the same and even better.

Characteristics:

High quality porcelain inner pot features food nutrition preservation without losing its taste. The high quality porcelain inner pot adopted by this slow cooker gives you every satisfaction. Food will not be burnt, no need to take care beside. The heat-resistant and transparent glass lid, even after long usage, no oil stains will stick to it, keep clean and sanitary!

USAGE

Put the food material you are going to cook in the inner pot, keep soup or water at about 80% full. Clean thoroughly both the outside of the inner pot and inside of the Slow Cooker. Place the inner pot inside the cooker, adjust to high power or low power and stew for hours according to your own taste.

Function HIGH means full power (180W power), the food will be heated to 100 deg C for fast cooking. In this function, the cooking time should be no longer than 10 hours, otherwise obvious water loss may occur and affect the food taste.

Function LOW means low power (about 130W power), the food will be heated to about 95 deg C for gentle and even cooking.

| Function | Guideline | Recipe | Working temperature | Cooking time suggested |
|----------|--|---|---------------------|------------------------|
| HIGH | This is the setting to used, when you don't have time for a long slow cooking. | Casseroles, puddings, | About 100 deg C | 3 to 8 hours |
| LOW | LOW is the standard slow cooking temperature, it is ideal for foods that you start cooking in the morning before work, and enjoy at the end of your day. | Braises, Roasts, Stews, Ribs, Casseroles, less tender cut of meat soup. | About 95 deg C | 6 to 12 hours |

If you want less cooking time, you can first put the uncooked stewing material in other pot for pre-cooking on gas-oven or in microwave oven before you finally put them into the porcelain pot of the Slow Cooker. (Cooking in this way may reduce the cooking time by as much as half)

Cleaning and Maintenance

Unplug you slow cooker and allow it to cool down before cleaning.

Place the ceramic pot and lid in the dishwasher or wash with warm, soapy water. If food sticks to the surface, fill ceramic pot with warm, soapy water and allow to soak before cleaning. If scouring is necessary, use a nonabrasive cleaner or liquid detergent with a nylon pad or brush.

How to Troubleshoot

—If the Slow Cooker is found not to be working, check whether the power plug is well plugged into the power supply socket and well connected to the power.

—It is normal if you feel the outside of the slow cooker hot during long stewing.

—Do not operate this Slow cooker when it malfunctions or is dropped or damaged in any manner. Contact the Authorized Service Station for suggestion, repair, electric or mechanical adjustment.

Connection to the mains supply

Check that the voltage marked on the product corresponds with your supply voltage. This product is fitted with a 5A plug complying with BS1363. If this plug is unsuitable or needs to be replaced please note the following:

WARNING-THIS APPLIANCE MUST BE EARTHED.


The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW-EARTH

BLUE-NEUTRAL

BROWN-LIVE

For UK use only-Plug fitting details (where applicable):


As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol  or coloured GREEN or GREEN/YELLOW. The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 5A (BS1363) fused plug is used it must be fitted with a 5A fuse conforming to BS1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

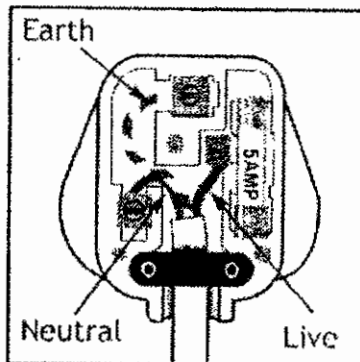



Products for :
ASDA Stores Ltd
Leeds
LS11,5AD



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.