



# **25cm Line Trimmer**

**with 20V 2Ah Lithium-Ion Battery & Charger**

**WEV20LT**  
**1938200001**

## **en - Original Instructions**

**Sales & Support: 01793 333212**

Before use please read & understand this manual; paying particular attention to the safety instructions.  
The manufacturer reserves the right to change the product specification and livery according to continues product improvements.



## INSTRUCTION MANUAL

8 August 19

---

### *Copyright Notice*

Copyright © Handy Distribution

Permission is granted to reproduce this publication for personal & educational use only.  
Commercial copying, redistribution, hiring or lending is prohibited.

No part of this publication may be stored in a retrieval system or transmitted in any other form or means without written permission from Handy Distribution.

In all cases this copyright notice must remain intact.

## CONTENTS

### SPECIFICATION

### IMPORTANT INFORMATION

### GENERAL SAFETY INSTRUCTIONS

### KNOW YOUR MACHINE

### ASSEMBLY

### BATTERY

### CHARGING

### OPERATION

### CLEANING & MAINTENANCE

### STORAGE & TRANSPORTATION

### TROUBLE SHOOTING

### PARTS DIAGRAM & LIST

### DECLARATION OF CONFORMITY

## SPECIFICATION

|                             |                                                              |
|-----------------------------|--------------------------------------------------------------|
| <b>Model</b>                | <b>WEV20LT</b>                                               |
| <b>Product Number</b>       | <b>1938200001</b>                                            |
| Voltage                     | DC 20V Max                                                   |
| No Load Speed               | 8500 min <sup>-1</sup>                                       |
| Trimmer Line Diameter       | 1.3mm                                                        |
| Trimming Cutting Width      | 250mm                                                        |
| Height Adjustment           | 20cm                                                         |
| Maximum Run Time (Unloaded) | 35 mins                                                      |
| Charge Time (Up to)         | 4 hours                                                      |
| Protection Rating           | III                                                          |
| Guarantee Sound Power Level | LWA 96 dB(A)                                                 |
| Vibration                   | 2.45 m/s <sup>2</sup> , Uncertainty K=1.5dB m/s <sup>2</sup> |
| Weight                      | N.W 2.2kg                                                    |

Consistent with our policy of continuous improvement, WEBB reserves the right to change the design and configuration of any of its products without notice or obligation. Therefore, please treat the text and images in this manual for illustrative purposes only. They may in no case serve as a basis for any legal claim.

**If you require any assistance with regards to the contents or operation of your machine, please call our Customer Service Team on 01793 333212 or email [customerservice@webbgardenpower.co.uk](mailto:customerservice@webbgardenpower.co.uk) (Monday to Friday 8.00am to 5.30pm excl. Bank Holidays)**



# INSTRUCTION MANUAL

## IMPORTANT INFORMATION



### WARNING

**Read this instruction manual carefully before operating this machine. Make sure that you are familiar with the controls and properly operate the machine. Following these instructions to reduce the risk of fire, electric shock and personal injury.**

### IF NOT USED PROPERLY THIS MACHINE CAN BE DANGEROUS!

This machine can cause serious injury to the operator and others, the warning and safety instructions must be followed to ensure reasonable safety and efficiency in using this product. The operator is responsible for following the warning and safety instructions in this manual and on the machine. Never use the product unless the fixing screws or guards are correctly positioned.

### DESIGNED FOR DOMESTIC USE ONLY.

For use in private gardens are those with an annual use not generally exceeding 50 hours and that are primarily used for tending GRASS OR LAWN AREAS, but not in public facilities, parks or sports grounds and not for agricultural or forestry use.

Compliance with the operating manual supplied by the manufacturer is a prerequisite for the proper usage of the lawn mower. The operating manual contains servicing and maintenance instructions as well as directions for use.

### TRAINING

Read the instructions carefully: Be familiar with the controls and the proper use of the equipment.

Never let children or other persons who have not read these instructions use the device. Persons younger than 16 must not use the device. Local regulations may determine the minimum age for users.

Never operate while people, especially children, or pets are nearby.

Keep in mind that the operator or user is responsible for accidents or hazards involving the machine that occur to other people or their property.

## GENERAL SAFETY INSTRUCTIONS

It is important that you read and understand the owner's manual and labels affixed to the machine. Learn its application and limitations as well as the specific potential hazards. Retain these instructions for future reference. The operator is responsible for following the warnings & instructions in this manual and on the product.

|                                                                                     |                                                                                                                                                                                                                                                                                     |                                                                                      |                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | Read & understand operator's manual before using the machine. Failure to follow instructions could result in death or serious injury.                                                                                                                                               |    | <b>DANGER</b><br>Beware of sharp blades & nylon line, which will continue to move after the motor is switched off. The blades could reciprocate, even after the plug has been removed from the power supply.                                     |
|    | Wear gloves to protect your hands<br>Wear safety shoes.                                                                                                                                                                                                                             |    | Check your machine before turning it on. Keep guards in place & in working order. Frequently check to see that foreign objects are removed from the working area before turning it on. Replace damaged, missing or failed parts before using it. |
|  | Whenever the machine is in use, safety glasses must be worn to safeguard against flying objects.<br>Hearing protection must also be used to protect the users hearing.<br>Face masks are also recommended to avoid inhalation of debris.                                            |  | Do not expose to rain or damp conditions                                                                                                                                                                                                         |
|  | Keep all bystanders & animals at least 15 metres away from the machine during operation.<br>If approached, stop the machine immediately.                                                                                                                                            |  | Safety alert symbol. Used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury.                                                                                          |
|  | Indicates an imminently hazardous situation which, if not avoided, will result in serious injury.                                                                                                                                                                                   |  | Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.                                                                                                                                               |
|  | Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.                                                                                                                                                                          |  | Used without the safety alert symbol, indicates a potentially hazardous situation which, if not avoided, may result in property damage.                                                                                                          |
|  | Class III Protection                                                                                                                                                                                                                                                                |  | Sound Power Level<br>(Image used for illustration purposes only, check machine and Declaration of Conformity for actual reading)                                                                                                                 |
|  | According to the European directive 2012/19/EU for Waste Electrical & Electronic Equipment and its implementation into national law, electrical and electronic equipment that are no longer usable must be collected separately & disposed of in an environmentally correct manner. |  | Separate collection of used products and packaging allow materials to be recycled & used again. Reuse of recycled materials helps prevent environmental pollution and reduces the demand for raw material.                                       |
|  | CE marking is a certification mark that indicates conformity with health, safety, and environmental protection standards for products sold within the European Economic Area.                                                                                                       |                                                                                      |                                                                                                                                                                                                                                                  |



# INSTRUCTION MANUAL

## PREPARATION

To operate this device safely, the user must have read and understood these instructions for use before using the device for the first time. Observe all safety instructions! Failure to do so may cause harm to you and others.

Retain all instructions for use, and safety instructions for future reference.

If you sell or pass the device on, you must also hand over these operating instructions.

The device must only be used when it functions properly. If the product or part of the product is defective, it must be taken out of operation and disposed of correctly.

Never use the device in a room where there is a danger of explosion or near flammable liquids or gases.


Always ensure that a device which has been switched off cannot be restarted unintentionally.

Do not use devices with an on/off switch that does not function correctly.

Keep children away from the device! Keep the device out of the way of children and other unauthorised persons.

Do not overload the device. Do not use the device for purposes for which it is not intended. Make sure to always wear the required personal protective equipment.

The clothing of the operator should be close fitting. Avoid wearing loosely fitting clothing. Wear sturdy footwear and long work trousers.

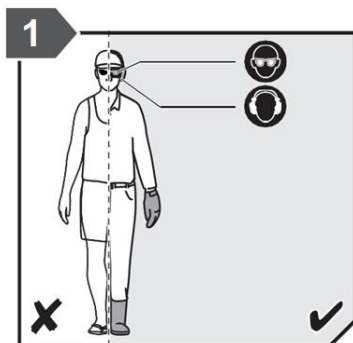

Always wear appropriate footwear, such as work boots, and trousers when operating the mower. Do not operate the equipment when barefoot or wearing open sandals. Always wear safety goggles or safety glasses with side shields when operating the machine.

Exercise caution and only work when in good condition: If you are tired, ill, if you have ingested alcohol, medication or illegal drugs, do

not use the device, as you are not in a condition to use it safely.

This product is not intended to be used by persons (including children) or who are limited in their physical, sensory or mental capacities or who lack experience and/or knowledge of the product unless they are supervised or have been instructed on how to use the product, by a person responsible for their safety.

Ensure that children are not able to play with the device.

Always comply with all applicable domestic and international safety, health, and working regulations.

## RISKS CAUSED BY VIBRATIONS

The vibration values specified in the technical data represent the main uses of the device. The actual existing vibrations during use may deviate from these because of the following factors:

- Incorrect use of the product;
- Unsuitable tools inserted;
- Unsuitable material;
- Insufficient maintenance.

You can reduce the risks considerably by following the tips below:

- Maintain the device in accordance with the instructions within this manual.
- Avoid working at low temperatures.
- When it is cold, make sure your body and hands are kept warm.
- Take regular breaks and move your hands at the same time to promote circulation.

## DEVICE-SPECIFIC SAFETY INSTRUCTIONS

Keep the handle dry and free of grease.

Make sure to always wear personal protective clothing when operating.

Make sure the connection cable is always kept out of the working range of the device. Make sure that cables always lead away from the rear of the device.

Make sure you are positioned firmly and with a natural stance when working with the device.

Always hold the unit tightly with both hands.

Before starting work, check the area for animal and objects. Remove all objects that may be blown away by the unit, or that the cutting blade/line may become caught on.

Before starting work, check the area and remove all objects which may damage the cutting mechanism.

Always ensure sufficient distance to the cutting mechanism.

In the vicinity of 15m around the cutting area there should be no people or animals, they may be hurt by flying objects.

Only work with good light and visibility.

Do not work above hip height! Do not bend forwards or lean over backwards!

Pay attention when walking backwards. Danger of stumbling!

The cutting tool will continue to rotate even after the engine has been switched off.

Risk of injury caused by the cutting blade/line!

Always keep the machine in the normal working position before switching on.

Ensure that the ventilation slots are kept free from dirt.

Never mount metal cutting elements.

Children should be supervised to ensure that they do not play with the device.

Remember that moving parts may also be located behind ventilation and venting slots.

Symbols affixed to your tools may not be removed or covered. Information on the device that is no longer legible must be replaced immediately.

Read the operating manual before using the device

#### **MAINTENANCE AND STORAGE**

Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.

Replace worn or damaged parts for safety.

Keep the machine free of grass, leaves, or other debris build-up.

Allow the machine to cool before storing.

#### **STAY ALERT**

Do not operate the machine while under the influence of drugs, alcohol, or any medication that could affect your ability to use it properly. Do not use this machine when you are tired or distracted from the job at hand. Be aware of what you are doing. Use common sense.

#### **AVOID DANGEROUS CONDITIONS**

Make sure there is adequate surrounding workspace. Cluttered areas invite injuries.

Keep your work area clean with sufficient light.

Keep area around the machine clear of obstructions, stones, sticks, wires and other debris or foreign bodies which could cause damage to the machine.

DO NOT SMOKE, whilst using the machine.

#### **INSPECT YOUR MACHINE**

Check all bolts, nuts, and screws for tightness before each use, especially those securing guards and drive mechanisms.

Vibration during use may cause these to loosen. Replace damaged, missing or failed parts before using.

Warning labels carry important information.

Replace any missing or damaged warning labels.

#### **KEEP BYSTANDERS AND CHILDREN AWAY**

Keep unauthorised persons or animals a minimum distance of 15 metres away from the mower. Do not allow children to handle, use, or climb on the lawnmower.

#### **DO NOT OVERREACH**

Always keep proper footing, particularly if using on slopes. The machine should not be used on steep slopes and always be sure of footing.

#### **AVOID INJURY FROM UNEXPECTED ACCIDENT**

Keep hands out of the way of moving parts, particularly the engine and rotating cutting tool.

#### **DO NOT FORCE TOOL**

Always work within the rated capacity. Do not use the machine for a purpose for which it was not intended. Always use the correct handles provided with the machine.

#### **MAINTAIN YOUR MACHINE WITH CARE**

Clean the machine immediately after use. Keep the machine clean to ensure it operates to its full and safest performance. When maintaining this machine, only the manufacturer's original replacement parts should be used. The use of non-original manufacturer parts may invalidate your warranty.

#### **STORE IDLE EQUIPMENT**

When not in use, the machine should be stored in a dry location. Keep the machine away from children and others not qualified to use it.

#### **CHARGER**

The charger may only be used in dry rooms.

Unplug cable connections only by pulling on the plug. Pulling on the cable could damage cable as well as plug and electrical safety could not be guaranteed.

Never use the charger if cable, plug, or the device itself have been damaged through external influence.

Under no circumstances should you open the charger. In case of a malfunction take the device to an approved service dealer.

Charge the battery only with a suitable charger. The use of other chargers might cause a fire or damage to the battery.

#### **BATTERY**

As a result of incorrect use, fluid can leak from the rechargeable battery. Avoid contact with the fluid. In case of accidental contact, rinse with



## INSTRUCTION MANUAL

water. In case of fluid contact with the eyes, seek medical aid. Leaking battery fluid can cause irritation of the skin or burns.

In the event of improper use of the battery pack, there is a risk of escaping hazardous vapours. Always ensure proper ventilation and immediately consult a doctor, if you feel unwell. The vapours might irritate the respiratory track.

### OPERATING TIMES

Please check noise abatement regulations prevailing in your country.

### SAFE DISPOSAL OF BATTERIES



Our batteries are designed according to the latest state of technology and optimised for the use in electric tools. Lithium ion cells contain hazardous substances and may therefore not be disposed off with normal household waste.

Our batteries are lithium ion cells and are therefore subject to special disposal regulations. Bring defective batteries to your specialist dealer. Before disposing of the tool, remove the battery.

We wish to encourage users to act in an environmentally friendly manner.



#### DANGER OF FIRE!

Never charge batteries in the vicinity of acids or easily flammable materials.  
Charge battery only at a temperature between 10 - 45 °C. After a heavy load, first allow the battery to cool.



#### DANGER OF EXPLOSION!

Protect the device from direct exposure to heat and fire.

Do not place on heating units or expose to strong sunlight for an extended period.

Operate the device only at temperatures between -10 °C to + 45 °C..



#### RISK OF SHORT CIRCUIT!


For disposal, transport or storage, pack the battery in a plastic bag or a cardboard box, or isolate the contacts with adhesive tape.

Do not open the battery pack.



## KNOW YOUR MACHINE

|                           |                    |
|---------------------------|--------------------|
| 1. Front Handle           | 2. Height Adjuster |
| 3. Rotating Head Adjuster | 4. Plant Guard     |
| 5. Guard                  | 6. Trigger         |
| 7. Lawn Edging Wheel      | 8. 20V 2Ah Battery |
| 9. Handle Angle Adjuster  | 10. Spool & Nylon  |

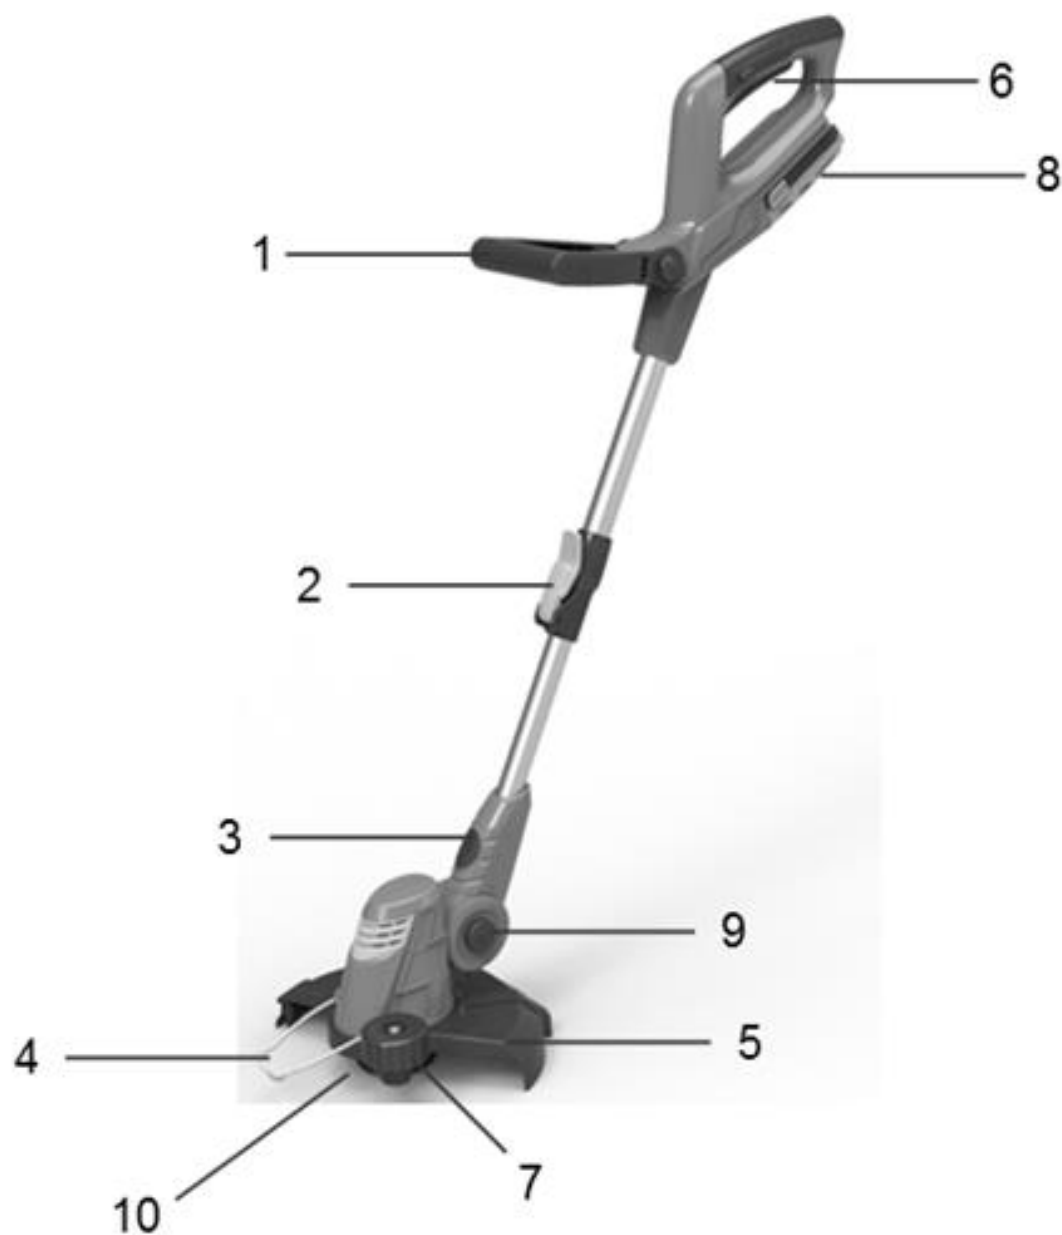



## INSTRUCTION MANUAL

### ASSEMBLY

Remove the machine and contents from the carton. Be sure the carton is empty before discarding.

**If you require any assistance with regards to the contents or operation of your machine, please call our Customer Service Team on 01793 333212 or email [customerservice@webbgardenpower.co.uk](mailto:customerservice@webbgardenpower.co.uk) (Monday to Friday 8.00am to 5.30pm excl. Bank Holidays)**


### PROTECTIVE GUARD



#### CAUTION

**Risk of injury! On the underside of the protective guard there is a sharp blade designed to cut the thread. Remove the transportation protection before operating.**

Place protective guard in position over the spool and align the three fixing holes in the guard, with those in the main body. Affix with three fixing screws provided and tighten until secure. Remove any transportation protection from the cutting blade.

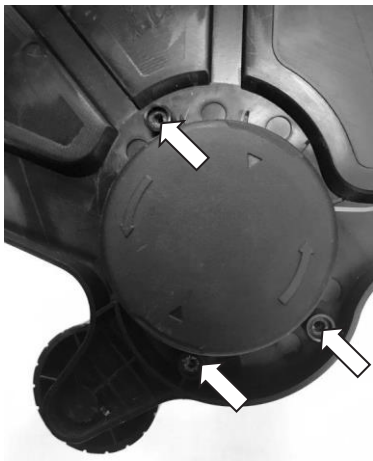

### FRONT HANDLE

Press in and hold the locking buttons. Slide the front handle onto the product as illustrated.

Release the locking buttons. Tighten the handle into position with the remaining fixing screw, ensuring the left and right sections of the handle are secured.



### **PLANT GUARD**

**Only follow the below action if the plant guard is not fitted to the machine.**

Align the plant guard with the two fixing holes on the front of the motor assembly. Prize apart the two prongs of the plant guard and slide them into the fixing holes.



### **BATTERY**

#### **CARE**

- There will be some charge present in the Battery on delivery, but to ensure maximum running time, charge your Battery for 4-hours before first use.
- If over a period of time the Battery quickly runs down after a full 4-hour charging period, a replacement Battery is needed.
- To prevent permanent Battery damage, never store in a discharged condition.
- Contact your retailer, local approved service dealer for a replacement Battery and for safe disposal of your old Battery.
- The Battery is a "High Power", 20 Volt, 2.0 Amp-Hour item
- The Battery is "Sealed for Life and no maintenance is required.

#### **IMPORTANT**

**DISPOSE OF YOUR OLD BATTERY PACK SAFELY DO NOT CUT OPEN, BURN OR INCINERATE.**

#### **WINTER STORAGE**

- Fully charge for 4-hours before winter storage.
- Re-charge the Battery every 3 to 4 months for a full 4-hour charging period to top up the battery during winter storage.
- Avoid extended storage without re-charge.
- Store in a cool dry place.



## INSTRUCTION MANUAL

### CHARGING



**The battery must be charged for approximately 4 hours before using it for the first time. Use only the original charger supplied with this machine or approved replacement. Use charging unit only in dry rooms.**

- Remove the battery from the grass trimmer. Apply pressure to both side release buttons to release the battery and slide it towards the rear of the machine



- Connect the charger to the power mains.
- Insert battery in the charger, ensuring an audible click is heard.

### CHARGING LIGHTS

Remove the battery from the charger once it is fully charged. Charging an empty battery will take up to 4 hours to fully recharge.

### WINTER STORAGE

- Fully charge for 4-hours before winter storage.
- Re-charge the Battery every 3 to 4 months for a full 4-hour charging period to top up the battery during winter storage.
- Avoid extended storage without re-charge.
- Store in a cool dry place.

### GENERAL INSTRUCTIONS:

In order to maintain the long service life of the battery, always follow the instructions below:

The line trimmer will automatically switch off when the battery voltage is low. The battery must then be recharged before the tool can be used again.

Always recharge the lithium-ion battery prior to any prolonged period of non-use, i.e. before storing away in autumn/winter.

The charging time is 4-hours maximum for a battery that is completely empty.

The lithium-ion rechargeable battery can be charged at any charge level and charging can be interrupted at any time without damaging the battery (no memory effect).

## OPERATION



### DANGER

**Risk of injury! The device may only be put into operation if there are no defects. If a part is defective it must be replaced before the device is used again.**



### WARNING

**Risk of injury! Before starting work check the area and remove all objects which may be kicked up by the unit.**

Check to make sure there are no visible defects.

Check to make sure all device components are correctly mounted

### CORRECT POSITION

Hold the unit with the left hand on the front handle, and the right hand at approximately hip level on the operating handle, balanced in a comfortable way.

### SETTING THE ANGLE OF THE FRONT HANDLE

Press in and hold the locking buttons.

Adjust up and down to the required position.




### SETTING THE ADJUSTABLE HANDLE

Loosen the locking lever.

Pull the telescopic pole to the desired length.

Tighten the locking lever.

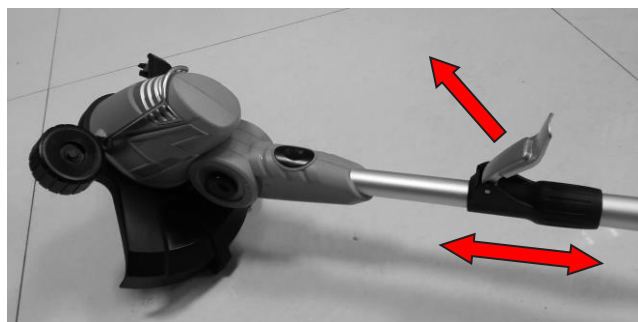

### SWITCHING ON AND OFF

**Ensure the battery is housed in the trimmer, with an audible click.**

#### Switching on:

Push in the safety button with your thumb.

Pull the On/Off trigger upwards.

Release safety button.

#### Switching off:

Release the On/Off trigger.





## INSTRUCTION MANUAL

### AUTOFEED NYLON LINE

When switching on the line trimmer, the inertia of the head spinning will feed a small length of line out. An 'impact' noise can be heard when the nylon line hits the cutting knife, located on the shield. After a minimal period, the nylon line will be cut to the correct length and the noise will reduce as the motor reaches operation speed. Make sure the motor is up to full speed before trimming or edging.

If the noise of the nylon line being cut cannot be heard, more line will need to be fed out. To feed more line, it is first necessary to allow the machine to stop completely, then re-start, allowing it to reach full speed.

### MANUAL FEED NYLON LINE

You can manually feed out the nylon line. To do this, press & release manual feed button, whilst pulling on the nylon line. Feed until the line reaches the cutting knife. If the line extends past the cutting knife, remove the spool cap and click spool anti-clockwise until the line is at the desired length.

### CUTTING TIPS

Only cut with the left (shown here as light grey) area of the cutting unit when the unit is being moved from right to left.

In the right (dark grey) area, the threads rotate in your direction.

This represents a high level of kickback risk and objects may be thrown in your direction by the rotation of the thread. You may be hurt as a result.



When the unit is moved from left to right, ensure that the nylon line is kept away from the grass to ensure that the grass is not thrown up. Cut long grass from top to bottom to ensure that the grass does not get tangled around the spool.

Only use the tip of the nylon line. This way you use less nylon line and avoid grass getting caught up in the spool.


Only take the nylon line as close as necessary to posts, walls, fences etc. Solid objects will wear the nylon line.

Tree trunks, young trees and bushes may be damaged by the nylon line.

### MANUAL FEED BUTTON

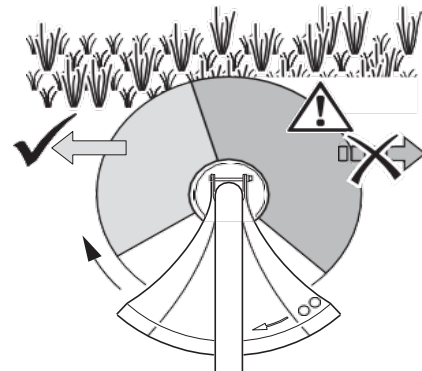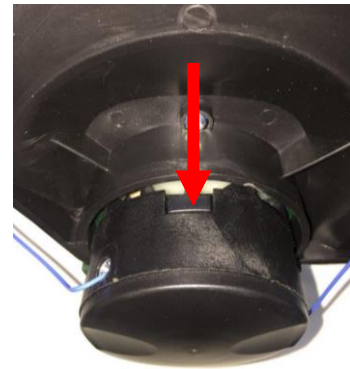


### LINE TRIMMING (STANDARD)

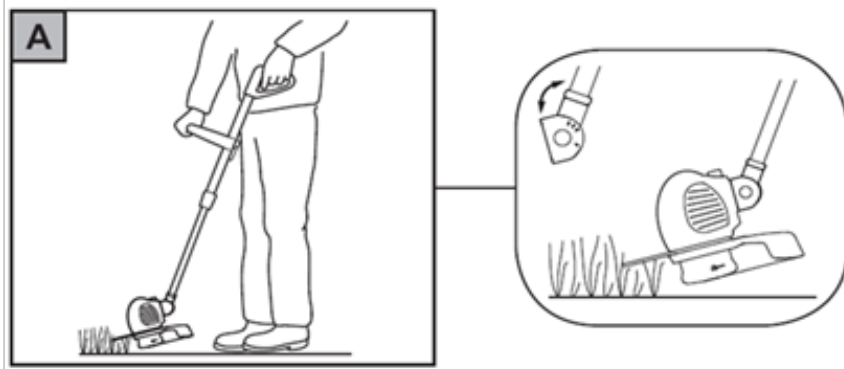


### LINE TRIMMING (SLOPES & UNDER OBSTACLES)

Adjust the angle of the head up or down to ensure you have a clean and unobscured cutting angle.

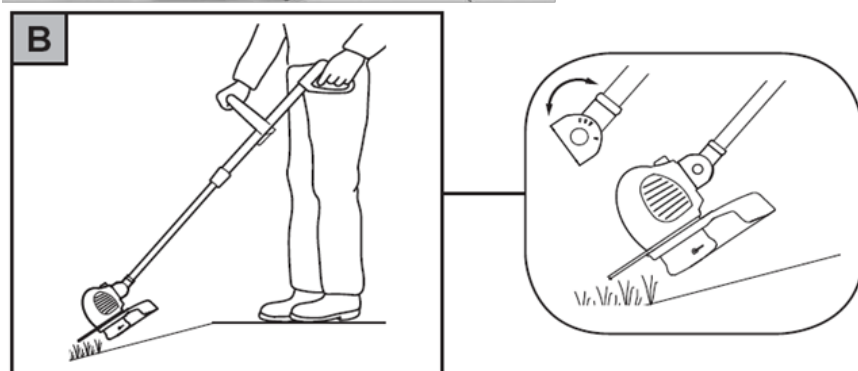

### TRIMMING EDGES

Press in and hold the locking button. Rotate the cutting head 180 degrees. Release the locking button. Guide the unit, as shown, slowly along the edge of the lawn, using the side wheel. Ensure the Plant Protector is placed in the upright position, against the motor housing.

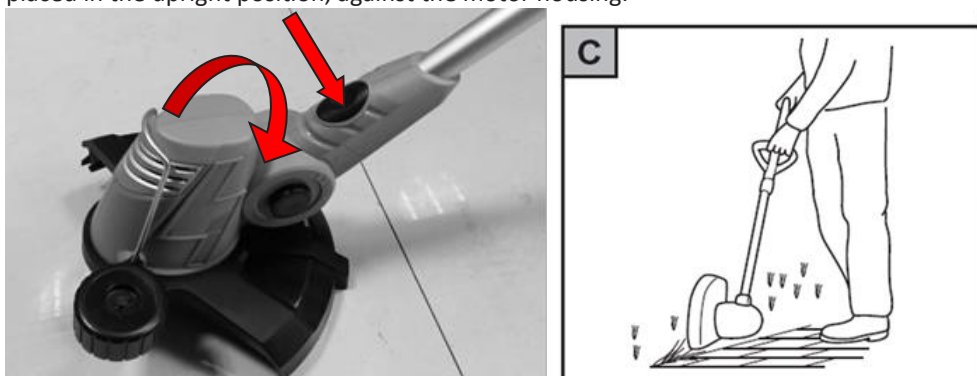



# INSTRUCTION MANUAL

## CLEANING & MAINTENANCE



### DANGER

Prior to conducting maintenance or cleaning: Remove the battery from the machine.  
The trimmer continues to spin after being switched off! Always remove battery before performing any work on the trimmer!

**Note:** Clean unit immediately after every use. Grass debris when dry is very hard and are very difficult to remove.

### BEFORE EACH USE

| What?                                              | How?                                                                |
|----------------------------------------------------|---------------------------------------------------------------------|
| Check the battery, charger and machine for damage. | Conduct a visual inspection and have any faulty component replaced. |

### IF NECESSARY

| What?                                      | How?                                                                                                                                     |
|--------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| Cleaning the device                        | Wipe the unit with a damp cloth.                                                                                                         |
| Replace the nylon line if it is too short. | Replace the nylon line (1.3mm) and feed following the directional arrow on the spool or replace with replacement spool and line (HP-344) |


### REMOVING THE SPOOL

Remove the spool by pressing the locking lugs in and remove the cover/cap. Pull out the spool.

### INSERTING THE SPOOL

Feed the nylon line through the eyelet opening of the spool housing.

Press the spool into the spool housing. Mount cover and allow to engage.

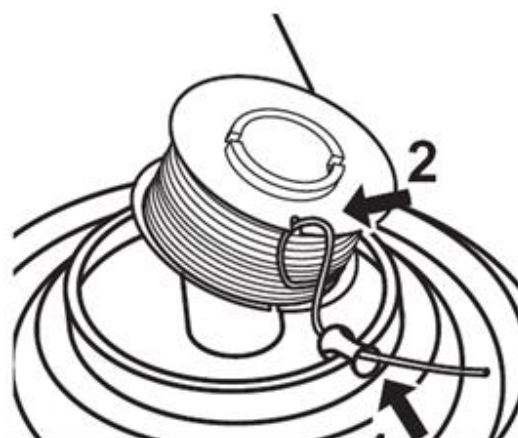

## STORAGE & TRANSPORTATION

### STORAGE

Store the tool in a dry and well-ventilated place.

### TRANSPORTATION

Always remove the battery from the machine when transporting the product.



## TROUBLE SHOOTING




Switch off the trimmer and disconnect the battery before inspecting, cleaning or working on the thread.

| Error/Fault                      | Cause                                                       | Remedy                                                                                     |
|----------------------------------|-------------------------------------------------------------|--------------------------------------------------------------------------------------------|
| Nylon Line breaks too frequently | Nylon line too dry or brittle                               | Place the coil in a container with water for approx. 24 hours. Dry and reinstall it.       |
|                                  | Nylon line in contact with fence posts, trees, etc.         | Use plant guard                                                                            |
| Tilt switch is not working.      | Dirt and debris in spool drive mechanism.                   | Clean parts with a brush                                                                   |
|                                  | Line is torn and stuck inside spool                         | Remove spool, check tightness of winding and replace spool in the usual way.               |
|                                  | Line is welded to itself or to spool through heat build-up. | Remove welded line section, check tightness of winding and replace spool in the usual way. |

If you can't fix the fault yourself, contact your retailer. Please be aware that any improper repairs will also invalidate the warranty and additional costs may be incurred.

## PARTS DIAGRAM

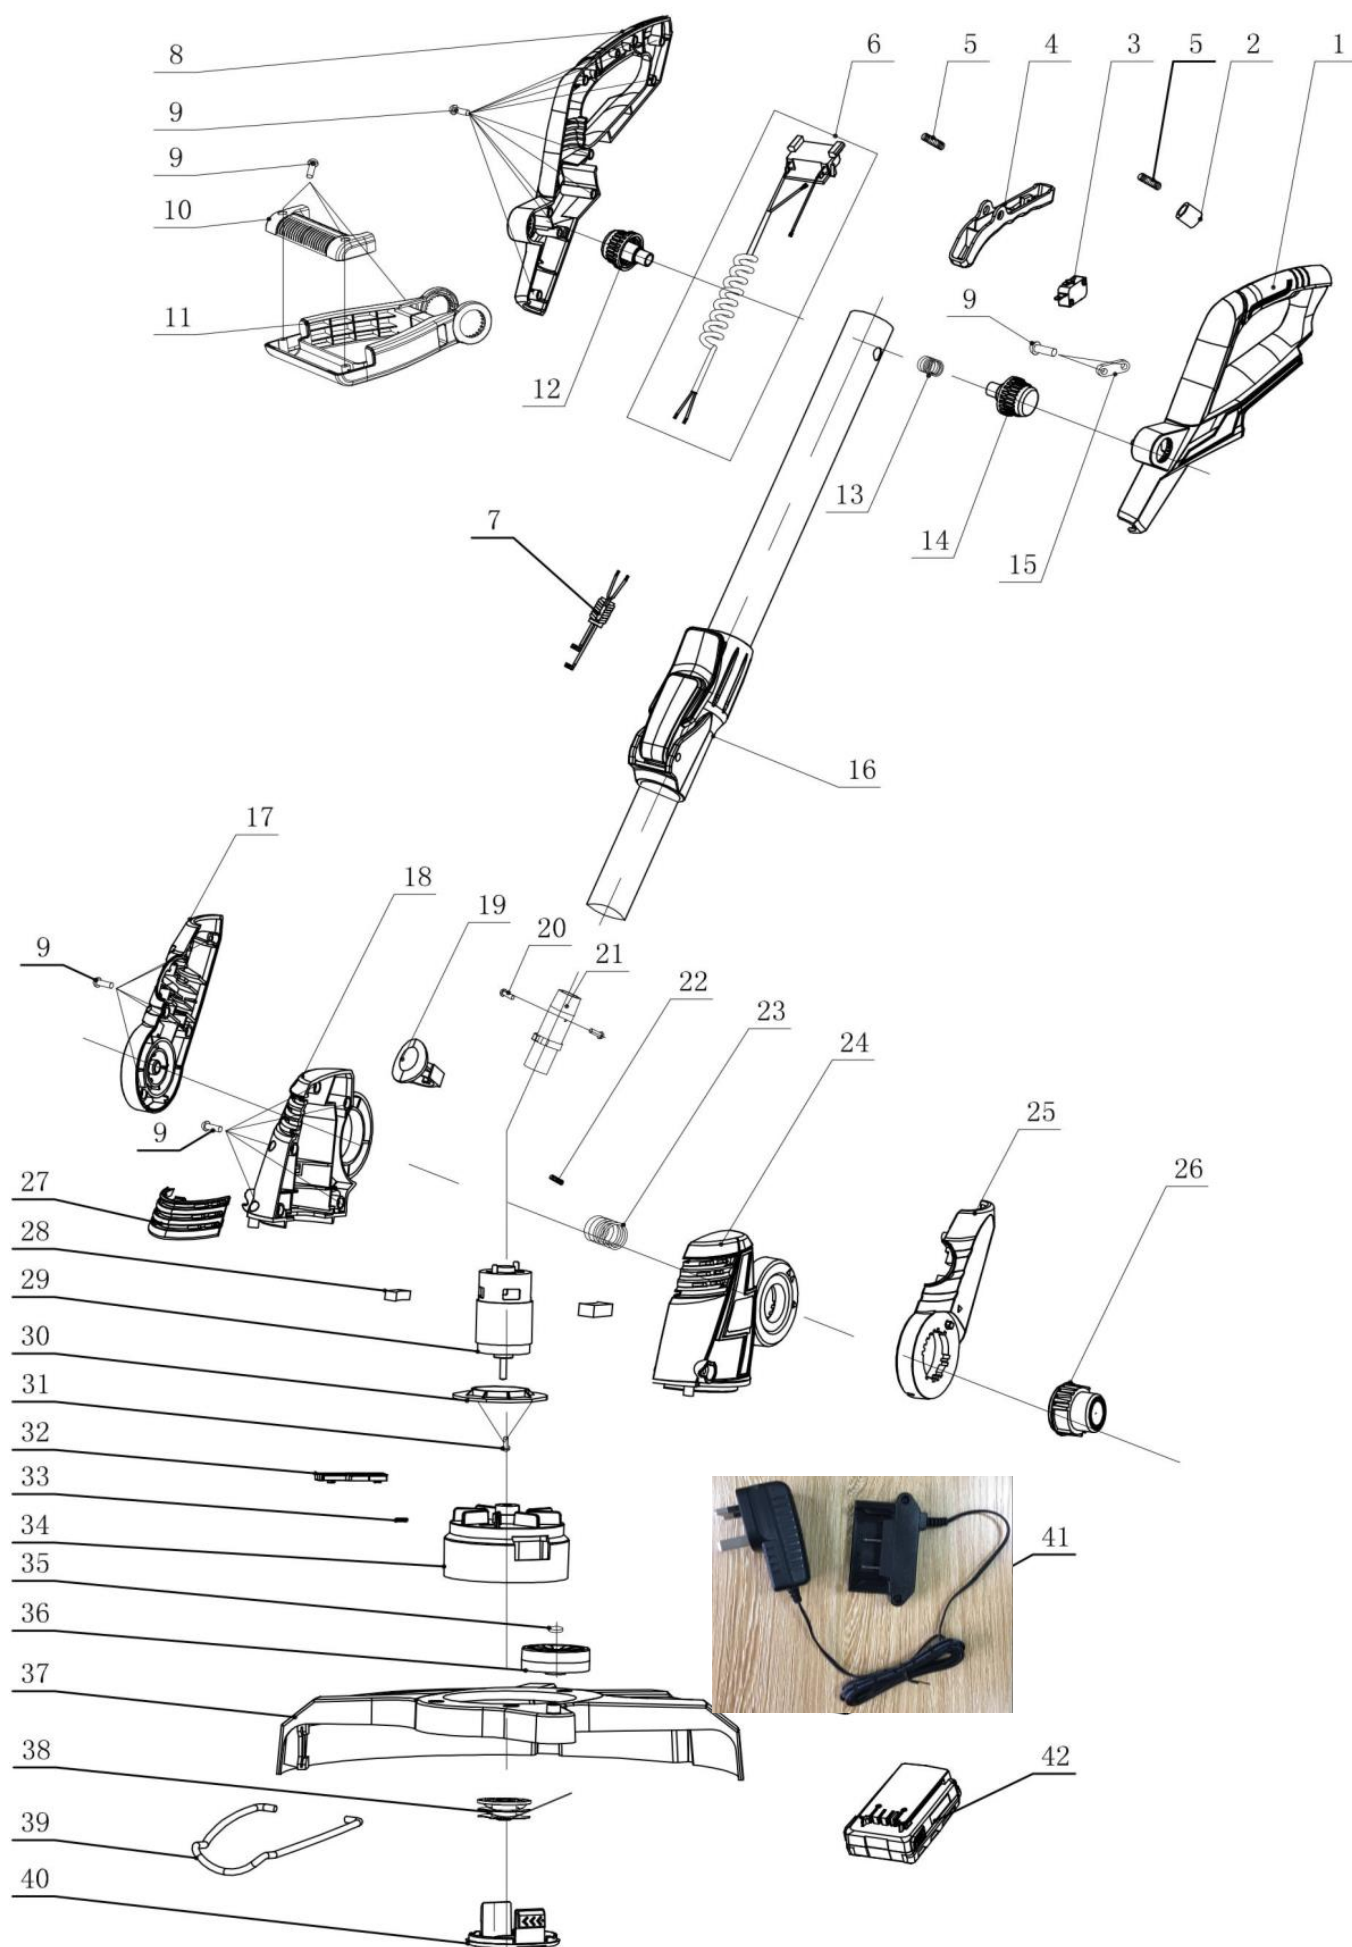

## PARTS LIST

| Item No. | Webb Part No.   | Description                  | QTY | Item No. | Webb Part No.   | Description            | QTY |
|----------|-----------------|------------------------------|-----|----------|-----------------|------------------------|-----|
| 1        | WE143-301062815 | Left Handle                  | 1   | 22       | WE143-103060271 | Button Spring          | 1   |
| 2        | WE143-301051101 | Safety Button                | 1   | 23       | WE132-103060096 | Connector Spring       | 1   |
| 3        | WE132-102020111 | Positive Microswitch         | 1   | 24       | WE143-301062818 | Left Motor Housing     | 1   |
| 4        | WE143-301062665 | Trigger                      | 1   | 25       | WE132-301029421 | Left Connector         | 1   |
| 5        | WE143-103060183 | Safety Button Spring         | 2   | 26       | WE132-301070617 | Shake Head Button      | 1   |
| 6        | WE143-102080474 | Spring Line Assembly         | 1   | 27       | WE143-301062819 | Motor Cover            | 1   |
| 7        | WE143-102090032 | Inductor                     | 1   | 28       | WE143-105020063 | Rubber Insert          | 2   |
| 8        | WE143-301062816 | Right Handle                 | 1   | 29       | WE143-102010444 | Motor                  | 1   |
| 9        | WE137-104030161 | Self-Tapping Screw           | 23  | 30       | WE143-301026200 | Motor Isolation Plate  | 1   |
| 10       | WE132-301029418 | Handle Upper Cover           | 1   | 31       | WE143-104030334 | Flat Head Screw        | 2   |
| 11       | WE132-301029419 | Handle Lower Cover           | 1   | 32       | WE143-103990741 | Balance Block Assembly | 1   |
| 12       | WE131-301023043 | Right Adjustable Handle Knob | 1   | 33       | WE143-103060261 | Slider Spring          | 1   |
| 13       | WE143-103060028 | Adjuster Spring              | 1   | 34       | WE143-301062820 | Fan Assembly           | 1   |
| 14       | WE131-301023045 | Left Adjustable Handle Knob  | 1   | 35       | WE143-104050006 | Shaft Ring             | 1   |
| 15       | WE134-301990135 | Cable Clamp                  | 1   | 36       | WE143-301029312 | Wheel                  | 1   |
| 16       | WE132-4040109   | Telescopic Shaft             | 1   | 37       | WE143-301062821 | Guard Assembly         | 1   |
| 17       | WE132-301029420 | Left Connection              | 1   | 38       | WE143-301100043 | Spool & Line Assembly  | 1   |
| 18       | WE143-301062817 | Right Motor Housing          | 1   | 39       | WE143-103990789 | Plant Guard            | 1   |
| 19       | WE143-30107624  | Rotary Button                | 1   | 40       | WE143-301029461 | Spool Cover            | 1   |
| 20       | WE143-104030309 | Self-Tapping Screw           | 2   | 41       | WE143-CHARGER   | 0.5 ah Charger         | 1   |
| 21       | WE132-301029422 | Rotating Joint               | 1   | 42       | WEV202AH        | Battery 2.0Ah          | 1   |



## EC DECLARATION OF CONFORMITY

**We Handy Distribution Ltd - SN3 5HY (Importer) declare that the product:**

**Designation:** Lithium-ion Battery Line/Edge Trimmer

**Model(s):** WEV20LT

**Product Number:** 1938200001

**Type/Serial No.** As per rating label on machine

**Battery:** DC 20V Max

**Protection:** Class III

**Max. Cutting Speed:** 8500 min<sup>-1</sup>

**Cutting Width:** 250mm

**This machine conforms to EU Directives, to which this declaration relates & corresponds to the relevant basic safety and health requirements of Directive:**

Machinery Directive 2006/42/EC

EMC Directive 2014/30/EU

**For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standards and/or technical specification(s) have been respected:**

EN60745-1:2009+A11:2010, EN 60745-2-15:2009+A1:2010.

EN55014-1:2017, EN55014-2:2015

**Guaranteed Sound Power Level:** L<sub>WA</sub> = 96dB(A)

**Vibration Level:** 2.45m/s<sup>2</sup> (Uncertainty – K=1.5m/s<sup>2</sup>)

**Notified Body:**

Intertek Testing Services Shanghai

**Addresses:**

Building No. 86, 1198 Qinzhou Road (North), Shanghai 200233, China

**Authorised signatory and technical file holder**

**Date:** 21/12/2018

**Name:** Mr Simon Belcher

**Signature:**

**Position:** Chairman

**Company:** Handy Distribution Ltd

**Address:** Murdock Rd, Swindon, Wiltshire, SN3 5HY.

## Notes



## INSTRUCTION MANUAL

This Service Book is provided with your Webb, to help you look after your purchase to our recommendations and enable you to take advantage of the conditional manufacturer domestic warranty\*.

Present this service book to your authorised Webb repair dealer, whenever a service or a warranty appraisal is required.

The booklet is applicable to the following products, in the UK only:

Ride On Lawn Tractors  
Cylinder Lawnmowers  
Petrol Rotary Lawnmowers  
Petrol Hand Held Range

Please register your machine using the following pages or at [www.webbgardenpower.co.uk](http://www.webbgardenpower.co.uk). By registering your machine, you agree to maintain the machine in accordance with the service schedules specified in this manual and services duly recorded. (Not applicable for Webb electric handheld machines). You may be asked to produce this booklet as proof of servicing in the event of a claim. Proof of purchase should also be kept as a reference.

Ensure you have the following information available from your machine product label. The two examples below can be found on your machine:



1. Model Number

2. Serial & Product Number

Please complete using BLOCK CAPITALS.  
Sections marked\* must be completed to validate Warranty.

### *1. Users Statement of Warranty*

Each new machine is warranted against defective material or assembly of material under normal usage. The warranty applies to the original purchaser, is not transferable and covers faulty parts and the labour involved in replacing and repairing those parts, which are of original manufacture.

### *2. Period of Warranty*

**Webb (excludes Electric Handheld) & Webb Pro**, 2 year conditional warranty from the original date of sale to the first domestic user.

**Webb Electric Handheld & Dynamic, Legacy & Heritage** 1 year warranty from the original date of sale to the first domestic user.

90 days from the original date of sale to the professional/commercial or for hire user.

Engine warranty as per the engine manufacturer's warranty, which will be supplied with the machine.

90 days from the original date of sale for Replacement Spare Parts

All machines' must be serviced within the first 14 months from the original date of purchase, to qualify for a second year parts & labour warranty, details of the service must be recorded in the service record within this manual.

A reduced warranty period of 90 days applies to those items which are subject to normal wear and tear and in normal use, will need replacement or adjustment.

These items are chargeable after 90 days of ownership.

Filters  
Tyres / Wheels  
Drive chains and belts  
Brake & clutch friction components  
Control cable & starter cords  
Fluids & lubricants  
Spark plugs  
Blades (Lawnmowers & Brushcutters)  
Cutter bars (Hedgecutters)  
Drive & clutch cable surfaces  
Nylon Lines (Line Trimmers)  
Carburettor cleaning  
Bearings  
Bushes  
Electric cable  
Grass collectors

### *3. Not covered by this warranty*

(a) The warranty policy does not cover any depreciation or damages caused by ordinary wear, rusting or corrosion, lack of correct maintenance or operation, misuse, abuse, lack of transportation or accident.

(b) The warranty policy does not cover any costs necessary for the standard periodic maintenance services instructed by the operators manual, or service parts replacement which would include oil, filters, tyres, belts, brake linings, fuses, blades, seals and other service parts unless it can be proven that the item has evidence of faulty manufacture.

(c) The warranty policy will not cover failure or damage caused as a result of parts or accessories being modified without the written approval of GJ Handy & Co Ltd.

(d) The warranty policy will not cover the unit if non-genuine parts have been fitted and as a result damage has occurred to the unit.

(e) The warranty policy is non-transferable and is only applicable to the original purchaser.

### *4. Disclaimer*

(a) This warranty is only a remedy for defect of products. GJ Handy & Co Ltd will never warranty in terms of the merchantability or the fitness for a particular purpose.

(b) No person is authorised to make any warranties, representations or promises, expressed or implied, on behalf of



## INSTRUCTION MANUAL

GJ Handy & Co Ltd, or to modify the terms conditions or limitation of this warranty policy in any way.

(c) Neither GJ Handy & Co Ltd nor any company affiliated with GJ Handy & Co Ltd shall be liable in any event or manner whatsoever for incidental or consequential damages or injuries, including, but not limited to, loss of crops, loss of profit, out of pocket expenses or profits, rental of substitute equipment or other commercial losses.

### *5. General*

(a) Most warrantable failures show up within the first few weeks of use. These failures are usually straightforward and warranty assessment is relatively easy.

(b) Failures relating to cutter decks and belts need careful investigation, as the cause may not always be straightforward. Look for damage to blades and pulleys especially when the cutter belt or blade boss have snapped or cracked as this could be due to impact damage.

(c) Customers should always refer to the operator/instruction manual when any disputed problem arises, you will find most areas covered within the manual.

## Protecting your machine

### *Maintenance*

Regular maintenance of your Webb machine is essential to ensure it operates, safely, efficiently and therefore reducing the environmental impact.

It is the owner's responsibility to ensure that their Webb machine is maintained at specific intervals. Any approved Webb service dealer can undertake a service, which are specialised in our products and will be aware of your particular machine and any technical updates which will save valuable time & money.

If you are using your machine in dry, dusty or high temperatures, you will need to service the machine more regularly.

### *Fuel (if applicable)*

Due to ongoing efforts by fuel companies to reduce emissions, unleaded petrol will oxidize & deteriorate in storage overtime, leaving residue from detergent components.

Fuel deterioration problems may occur when petrol is stored for over 30 days. If you are planning to store fuel for over 30 days, we recommend you add Handy Parts Sure-Start fuel stabilizer to fresh fuel after purchasing. Sure-Start cannot reconstitute stale fuel.

### *Storage*

When storing your machine for an extended period, we do recommend that you follow the instructions of engine instruction manual.

Always store the fuel in a clean, approved and sealed container. If the container is steel, ensure it is not corroded. If the container is not filled to its recommended capacity, air can accelerate fuel deterioration.

Always store fuel away from direct sunlight, in a dark, cool environment.



Your servicing Webb approved dealer will stamp & date the below relevant sections, when the correct service actions have been completed.  
PLEASE ENSURE THE SERVICE BOOK IS AVAILABLE FOR THE DEALER, DURING SERVICE WORK.

1st Service

This must be stamped by an approved service dealer to qualify for a free second year warranty.  
(Excluding the Webb Electric Handheld machines)

12 Months

Date

24 Months

Date

36 Months

Date



# INSTRUCTION MANUAL

48 Months

Date

60 Months

Date

72 Months

Date

84 Months

Date

96 Months

Date

108 Months

Date

120 Months

Date

132 Months

Date

### Product Information (\* Compulsory)

### Personal Information (\* Compulsory)

\*Dealer Stamp (if available)

You may give Webb Lawnmowers notice in writing at any time that you no longer wish to receive direct marketing communications

Webb Lawnmowers  
Murdock Road  
Dorcan  
Swindon  
Wiltshire  
SN3 5HY