 




STEAM WALLPAPER STRIPPER

OPERATING INSTRUCTIONS

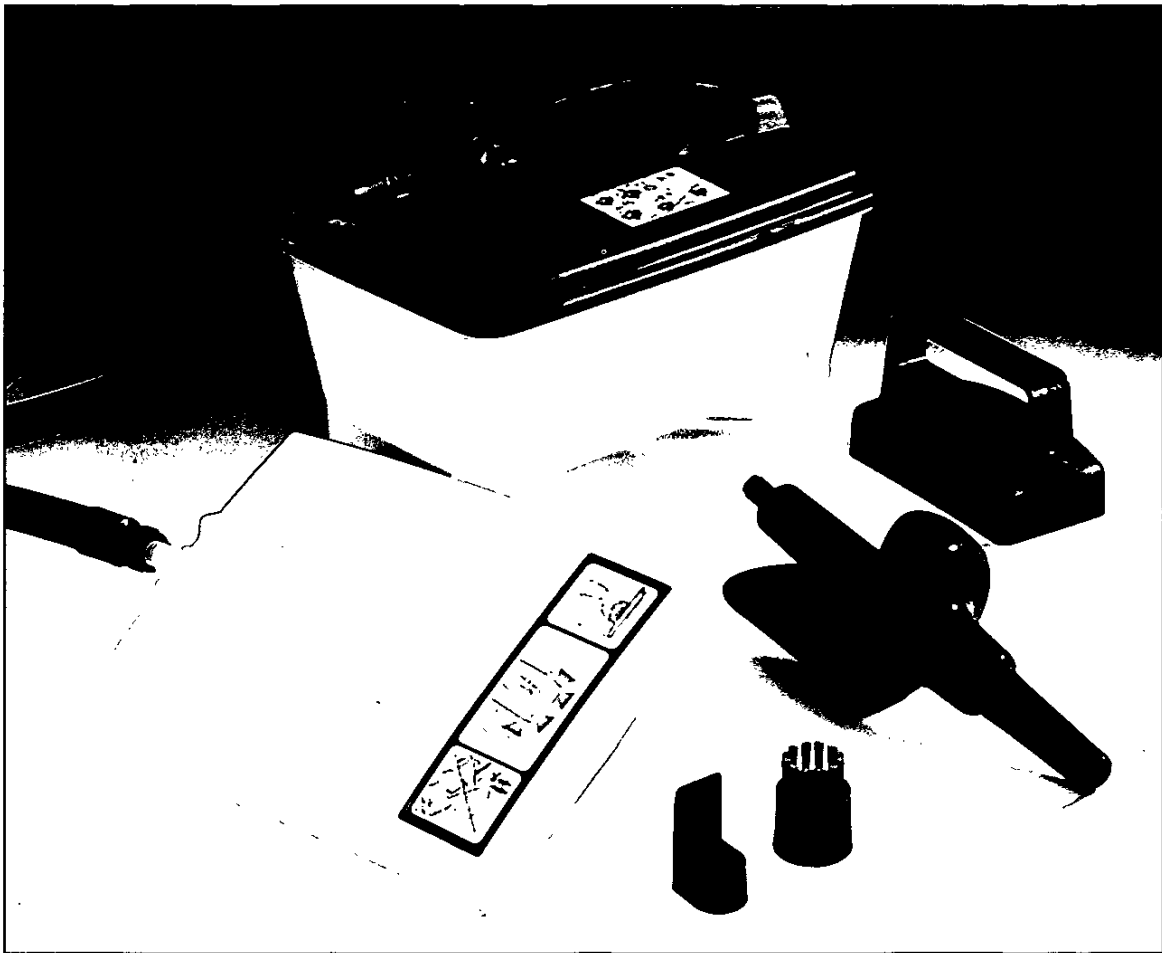

MODEL SS77

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

Thank you for purchasing an Earlex Steam Wallpaper Stripper. This is a highly versatile machine for use all around the home. In order to obtain the best results please read the instructions before commencing any work.

Please also make a special note of the safety rules and

RETAIN FOR FUTURE REFERENCE

Earlex Ltd. will accept no responsibility for the use of this product if used for any other purposes than those detailed herein.

SAFETY RULES

- Keep equipment away from children and pets.
- Ensure boiler is placed on a flat level surface, and should the boiler become tilted in use - level again immediately. Failure to do so can result in severe overheating, complete element failure and void your guarantee.
- Block boiler unit securely if using on stairs.
- The boiler becomes hot in use. Move only by using the carrying handle.
- **Steam is produced at 100°C. Be careful, wear protective clothing and protect your hands with heat resistant gloves or mitts.**
- Never point hose or steam plate at anyone.
- Always keep steam plate tilted away from face and body, beware of hot drips and regularly empty collected condensation from plate - especially when stripping ceilings and high areas.
- **Never remove filler cap or detach hose whilst unit is operating.**
- **Never block the safety valve.**
- **Switch off and wait for 2 minutes before removing filler cap to refill boiler.**
- Do not use outside when raining.
- Do not overfill.
- Allow to cool completely before emptying boiler.
- Do not stand on boiler or hose.
- Do not drag or try to move boiler by pulling the mains lead.
- Do not allow water or steam to enter light switches or power points.
- **Do not leave unattended.**
- Use only standard tap water. Never add detergents or chemicals.
- Extreme care must be taken if the unit is used in bathrooms. Always be aware of danger of electrocution from stored water in baths and sinks.
- Never change tools when the unit is operating.
- **Always store upright.**
- **Do not overfill the reservoir.**
- It is recommended that a RCD (residual current device) rated at 30mA is fitted into the mains supply socket for added protection against electric shock.
- Use only genuine Earlex replacement parts

CAUTION !

Check the state of your plaster before starting work.

Steam can loosen weak, porous or poorly bonded plaster - which also loosens readily if cracked, holed or if the steam plate is held in one position for too long after the paper is soaked.

Weak plaster can normally be detected by tapping a few areas of wall. A hollow sound indicates that you should proceed only with extreme care - stopping immediately if you hear a cracking sound or plaster starts to break loose.

The steam stripper is safe for drywall/plaster board surfaces but whatever the material, it is always wise to check a small area before starting work properly.

PROTECT YOUR HOME

 
The heat generated by the boiler unit can mark carpets, soft furnishings, table tops, cabinets etc. To prevent this we recommend placing the unit on a wooden board, tray or other barrier - making sure it will not slip off one side or tilt during use.

Dust sheets or newspapers are not suitable heat protectors for delicate surfaces.

PREPARATION

To achieve fastest paper removal always gently score the areas to be stripped.

With heavily embossed, vinyl coated or painted papers this is essential. Either use a proprietary perforator tool or alternatively score the paper with the edge of a wall scraper in a criss-cross pattern with 150mm (6 inch) spacing. As with all decorating work be sure to protect carpets and furniture with covers.

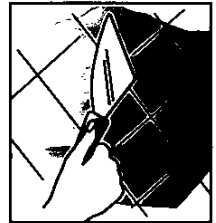

OPERATION

STEAM IS HOT! The unit is designed for safe, fast removal of wallpaper but please be aware that steam is produced at 100°C - so be careful, wear protective clothing and protect your hands with heat resistant gloves or mitts.

FILLING:

Remove filler cap and fill unit to Max. level line or indicator with clean - preferably hot - water.

Replace filler cap.

The capacity of 5 litres (9 pints) provides approx. 78 mins. steaming time before the safety cut-out operates. For a shorter steaming time use less water.

Do not overfill the unit or hot water will be forced up the steam hose.

Screw hose onto threaded outlets of boiler and steam plate, hand tight is sufficient.

Do not over tighten but do check for hand tight fit from time to time during use.

Connect mains lead from unit to power socket and switch on. It can take up to 15 mins (approx.) before steam is produced - depending on fill water quantity and temperature.

 
Do not leave unattended and keep children & pets out of the room.

Just before full steam production a small amount of bubbling and water will occur at the steam plate. **Beware of hot water discharge prior to steam emission.**

STRIPPING: Remember to check a small area first.

Operation is simple for both right and left handed people. Simply hold the steam plate flat against the wallpaper for approx. 10 seconds. Now move the plate to the spot immediately next to the one just steamed - from which the paper should now easily come away with a little help from a wall scraper. Working this way should enable continuous paper removal although it may be necessary to steam for longer periods with some papers, or if not completely removed first time. If unit requires refilling, unplug cord and allow to cool for at least 2 minutes before removing filler cap -

Beware of steam. When finished, allow to cool completely and empty unit. Always store unit empty.

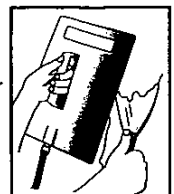

SAFETY CUT-OUT

A safety cut-out is fitted to prevent overheating the element if the water boils low. If unit stops boiling during use this may be the cause. Wait for 2 minutes before removing filler cap then re-fill with water. The cut-out will self reset and steam be produced again within 5-15 minutes. **The cut-out will not protect the element if a part filled unit is tilted during use in a way which enables part of the element to be out of the water for longer than 15-20 seconds.**

OTHER USES

Artex

Normally Artex can be removed using the same method as for wallpaper although the steaming time will be longer.

CAUTION: Some textured finishes may contain asbestos which may be hazardous to health and which are subject to licensing controls operated by the HSE (Health & Safety Executive).

Vinyl Floor Tiles

Vinyl floor tiles can also be removed if the plate is left long enough for the heat to penetrate the adhesive. Once the adhesive is hot it softens and the tile can be peeled from the floor.

 
Sterilising Soil

To sterilise soil in seed trays or greenhouses rake the soil to obtain a fine surface. Leave the steam plate on each section, for 2 to 2.5 minutes which should ensure that the steam has penetrated through the surface.

Killing Weeds

Steam will kill weeds on paths and patios without the use of chemicals. You will need to steam the weeds for 1 to 1.5 minutes in order to kill them.

Additionally you can remove creases from curtains, however before use you must check that the fabric will not be affected by steam and always use a clean steam plate. **NEVER use on Draylon**.

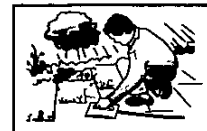

Killing weeds

JET NOZZLE CLEANER

IMPORTANT Always check the suitability of materials before steam cleaning. Steam is being generated at 100°C. Do not use on any surfaces that cannot stand this temperature e.g. Draylon®, delicate fabrics etc. Always test a small area of the material - preferably a portion that is normally unseen - and allow to dry before starting the full cleaning task. Do not soak materials being cleaned. Only light application of steam is required.

ASSEMBLING THE TOOL

The Universal Handle (AC302) is used in conjunction with the Jet Nozzle Cleaner. Align the outline triangle on the handle with the triangle on the accessory. Push the handle into the accessory and twist so that the solid triangles on the handle and accessory are aligned (see Diagram 1).

Over time, you may find that your steam cleaning accessories become awkward to assemble to the universal handle. This is due to the steam reducing the lubrication properties of the 'O' ring seals. In this event, simply lubricate the 'O' ring seals as illustrated (Diagram 2) using washing-up liquid or furniture polish.

OPERATING THE TOOL

Connect the universal handle to the jet nozzle head. Select the scraper head or brush to fit the nozzle end if required and push on to the nozzle.

Plug the boiler unit in and wait for steam to appear at the accessory head. **Beware of hot water discharge prior to steam emission.**

This accessory can be used for cleaning all round the house, stoves, cupboards, work surfaces, toilets, sinks, lawnmowers etc. It both cleans and disinfects at the same time.

It can also be used to defrost your freezer in minutes with no inconvenience. **Check with fridge/freezer manufacturer for advice before use.**

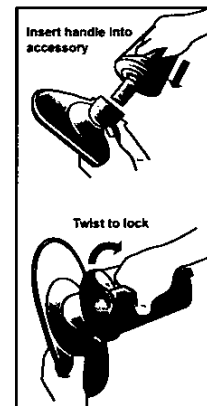 


Diagram 1
Assembling Handle



Cleans lawnmowers



De-frosts freezers


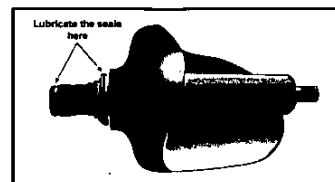 


Diagram 2 Seal Lubrication

SMALL STEAM PLATE

DANGER FROM STEAM. Always be aware that steam is being produced whilst the tool is in operation. Always wear a protective glove when using.

 This tool can be used to strip wallpaper in awkward areas, ie around door frames and in corners etc. Use similarly to the large steam plate, steaming one area whilst stripping a previously-steamed area. This will ensure quick efficient removal of the wallpaper.

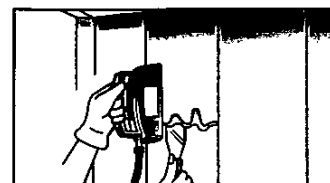

Strips hard to reach areas

DESCALING

To maintain peak performance of the unit, particularly in areas of hard water, it may be necessary to descale the element in the unit. Proprietary kettle descaling products can be used in your unit - always follow the manufacturer's instructions.

TROUBLE SHOOTING

Unit Fails to Boil

The unit has probably not been left for long enough to cool - refer to section on safety cut-out. Check the fuse in the plug is sound and is rated at 13 amps. If using an extension lead check that it is rated at a minimum of 10 amps and it is fully unwound.

Unit Leaks Steam from Pressure Relief Valve

The pressure relief valve is a special low pressure valve and cannot be replaced by any other valve. If steam is leaking from the valve, the most likely cause is a blockage in the hose. Allow the hose to cool then remove the hose and check for any blockage. Always check the inlet in the tool you are using.

UNDER NO CIRCUMSTANCES FORCE THE VALVE SHUT. THIS IS OPERATING FOR YOUR PROTECTION.

IF YOU REQUIRE FURTHER ASSISTANCE PLEASE CONTACT OUR HELPLINE ON:

Tel: 01483 454666 Fax: 01483 454548 email: enquiries@earlex.co.uk

Opening Hours: Monday-Friday 08.30-18.00 (Excluding Bank Holidays)

MAINS CONNECTION

Your unit has been supplied with a mains lead with a fitted plug. This is identified by the fuse holder in the base of the plug. Please read the following safety instructions before use.

1 If the fitted plug is cut off from the mains lead then the plug must be disposed of safely. NEVER under any circumstances insert such a plug into a 13 amp socket.

2 NEVER under any circumstances use the appliance or mains lead without the fuse cover fitted. This is the little cover fixed into the base of plug to hold the fuse in place.

3 If you lose the fuse cover then please contact any electrical dealer for a replacement or ring our helpline.

4 A replacement fuse must be rated at 13 amp. These must be manufactured and approved to BS1362.

5 IF IN ANY DOUBT PLEASE CONSULT AN ELECTRICIAN.

If you need to fit a plug to the mains lead, this should be fitted in accordance with the wiring instructions on the mains lead, and will need to be used with a 13 amp fuse. If in doubt consult an electrician.

 
WARNING - THIS APPLIANCE MUST BE EARTHED. If you are using an extension lead it must be rated at a minimum of 10 amps and fully unwound. Do not operate with a lead rated at less than 10 amps as this will cause premature failure of the element which is not covered by the guarantee.

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol, or coloured green or green and yellow.

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment, where in accordance with the legislation this product must not be disposed of in your normal household waste. Instead it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a 'Wheelie bin' symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



 
GUARANTEE

This product is guaranteed for a period of 24 months against faulty materials and workmanship.

Whilst every possible care is taken by the manufacturer to ensure that our products leave the factory in good working order, we cannot under any circumstances accept liability for problems or damage caused by their subsequent use. It is the responsibility of the user to ensure that surfaces to be cleaned or stripped are suitable for steam. This guarantee does not affect your statutory rights. This guarantee excludes the use for hire purposes. In the event of a fault occurring please contact our helpline before returning the unit to our Service Department at the address below together with a copy of your purchase receipt. All repairs will be dealt with speedily.

EC Declaration of Conformity

We declare that the unit: SS77 conforms to: 73/23/EEC, BSEN60335-2-54, & 89/336/EEC, EN55014-1, EN55014-2, EN61000-3-2, EN61000-3-3.

 Tim Hopper-Technical Director

STEAM CLEANING ACCESSORIES

A range of accessories is available for use with the wallpaper stripper to adapt it for many other tasks around the home.

EA11 Floor Cleaner - Ideal for bringing your carpets up like new. No chemicals required.

EA12 Window/Tile Cleaner - Gets your windows sparkling clean. Cleans floor tiles and wall tiles.

EA20 - Complete set of 3 Accessories - EA11, 12 & 13.

EA30 - Upholstery Cleaner. For cleaning upholstery, curtains, painted walls, car interiors, etc.

EA31 - Spare Towels for Floor Cleaner (pack of 3).

EA32 - Spare Towels for Upholstery Cleaner (pack of 3).

OTHER PRODUCTS FROM EARLEX

WD1000 - Combivac Workshop Vacuum & Blower. The 1100W motor provides a powerful suction and blowing facility which is ideal for use around the workshop, garage, caravan, car, garden and home. The 20 litre recovery tank has 12 litres wet capacity and is designed for the rough and tumble of every day use. The Combivac has on board storage facilities for its accessories, 6

metres of working length and a two year guarantee. There is also a variety of additional accessories available for use with the Combivac.

Spray Station - HVLP (High Volume Low Pressure) Complete paint spraying system - Ideal for spraying large or detailed jobs with equal ease. Fast and easy, provides a quality finish with no unsightly brush marks. The Spray Station can spray many types of paint, such as stains, varnishes, emulsion, glazes, wood treatments and many more.

ASG120 - Super Sprayer 120. The 120W motor Super Sprayer is perfect for spraying water and solvent based paints, wood preservatives, varnishes, stains, emulsion, latex and laquers. These can be applied either from the can using the remote pick-up system or from the paint container. The Super Sprayer 120 is also supplied with 1.0mm, 0.8mm and 0.6mm nozzles, viscosity cup for thinning the paint, flexible extension tube for spraying hard to reach areas/decking and a cleaning kit.